



INSTALLATION AND MAINTENANCE MANUAL FOR SWING DOOR



SW2 LIGHT
SW5 HEAVY

1. INTRODUCTION

Before you begin to install or start an automatic pedestrian doors, an inspection must be carried out on site by qualified personnel, for making measurements of the compartment wall, door and drive.

This inspection is to assess the risk and to select and implement the most appropriate solutions according to the type of pedestrian traffic (intense, narrow, one-way, bi-directional, etc.), The type of users (elderly, disabled, children, etc.), in the presence of potential hazards or local circumstances.

To assist installers in applying the requirements of European Standard EN 16005 concerning the safe use of automatic pedestrian doors, we recommend consulting the guides E.D.S.F. (European Door and Shutter Federation) available on www.edsf.com.

1.1 GENERAL SAFETY INSTRUCTION

This installation manual is intended for professionally competent personnel only. Before installing the product, carefully read the instructions.

Bad installation could be hazardous. The packaging materials (plastic, polystyrene, etc.) should not be discarded in the environment or left within reach of children, as these are a potential source of hazard.

Before installing the product, make sure it is in perfect condition. Do not install the product in an explosive environment and atmosphere: gas or inflammable fumes are a serious hazard risk.

Before installing the automations, make all structural changes relating to safety clearances and protection or segregation of all areas where there is risk of being crushed, cut or dragged, and danger areas in general.

Make sure the existing structure is up to standard in terms of strength and stability. FACE is not responsible for failure to use Good Working Methods in building the frames to be motorised or for any deformation occurring during use.

The safety devices (safety sensor, photocells, etc.) must be installed taking into account: applicable laws and directives, Good Working Methods, installation premises, system operating logic and the forces developed by the motorised door.

Apply hazard area notices required by applicable regulations.

The emission sound pressure level of the door is $LpA \leq 70dB(A)$.

Each installation must clearly show the identification details of the automatic pedestrian door.

The product, in its original packaging supplied by the manufacturer, must only be transported in a closed environment (railway carriage, containers, closed vehicles).

If the product malfunctions, stop using it and contact an authorised support centre.

The manufacture date is provided in the production batch printed on the product label. If necessary, contact us at www.facespa.it.

The general conditions of sale are given in the official FACE price lists.

1.2 EC MARKING AND EUROPEAN DIRECTIVES



Automations for swing pedestrian door, are designed and manufactured in compliance with the safety requirements of the European standard EN 16005 and are CE-marked in accordance with the Electromagnetic Compatibility Directive (2014/30/UE).

The automation also include a Declaration of Incorporation according to the Machinery Directive (2006/42/EC).

Pursuant to Machinery Directive (2006/42/CE) the installer who motorises a door or gate has the same obligations as the manufacturer of machinery and as such must:

- prepare the technical file which must contain the documents indicated in Annex V of the Machinery Directive; (The technical file must be kept and placed at the disposal of competent national authorities for at least ten years from the date of manufacture of the pedestrian door);
- draft the EC declaration of conformity in accordance with Annex II-A of the Machinery Directive and deliver it to the customer;
- affix the CE marking on the power operated door in accordance with point 1.7.3 of Annex I of the Machinery

All data and information contained in this manual have been drawn up and checked with the greatest care. However FACE cannot take any responsibility for eventual errors, omissions or inaccuracies due to technical or illustrative purposes.

FACE reserves the right to make changes and improvements to their products. For this reason, the illustrations and the information appearing in this document are not definitive.

This edition of the manual cancels and replaces all previous versions. In case of modification will be issued a new edition.



DECLARATION OF INCORPORATION

Machines Directive 2006/42/EC, Annex II-B



FACE S.r.l.

Viale delle Industrie, 74 - 31030 Dosson di Casier (TV) - ITALY

Declares that:

The Product automations for power operated pedestrian swing door type: **SW2, SW5.**

Has been built for installation on pedestrian door and constitutes a machine in accordance with Directive 2006/42/EC. The manufacturer of the power operated pedestrian door must declare its conformity in accordance with Directive 2006/42/EC (Annex II-A) prior to starting-up the machine.

It complies with the applicable essential safety requirements specified in Annex I, chapter 1 of Directive 2006/42/EC:

1.1.2, 1.1.3, 1.2, 1.3.1, 1.3.2, 1.3.4, 1.3.7, 1.3.8, 1.4, 1.5.1, 1.5.2, 1.5.10, 1.5.11, 1.5.14, 1.6.1, 1.6.3, 1.7

It complies with the Electromagnetic Compatibility Directive 2014/30/UE.

It complies with following harmonized standards:

EN 16005 Power operated pedestrian doorsets - Safety in use - Requirements and test methods

EN 60335-2-103 Household and similar electrical appliances - Safety - Part 2: Particular requirements for drives for gates, doors and windows

The technical documentation complies with Annex VII-B to Directive 2006/42/EC.

The technical documentation is managed by: Ferdinando Menuzzo with registered offices in Viale delle Industrie, 74 - 31030 Dosson di Casier (TV) - ITALY

A copy of the technical documentation shall be supplied to the competent national authorities following duly motivated request.

Place and date:

Dosson di Casier, 2022-09-01

Paolo Bacchin
Managing Director

A handwritten signature in blue ink, appearing to read "Paolo Bacchin", written over the printed name and title.

FACE S.r.l.

Viale delle Industrie, 74

31030 – Dosson di Casier (TV) Italy

Phone +39 0422 492730 Fax +39 0422 380414

www.facespa.it



Iscritta al Reg. Imp. di Treviso al n. 04552520266

C.F.-P.I. 04552520266

Capitale Sociale € 100.000,00 i.v.

R.E.A. di Treviso n. 359250

2. TECHNICAL DATA

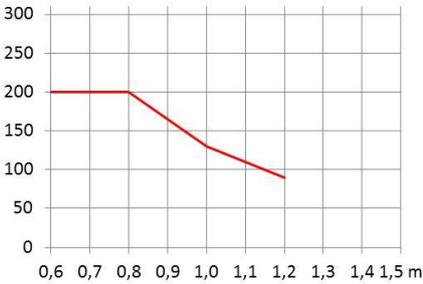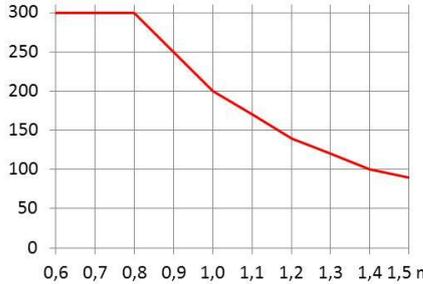
Technical data	SW2	SW5
Model	LIGHT (for internal use, not exposed to wind pressure)	HEAVY
Product dimensions (Height x Depth x Length)	82 x 117 x 443 mm	104 x 118 x 463 mm
Maximum load:	200 kg x 0,8 m 	300 kg x 0,8 m 
Opening and closing time	2 – 6 s	2 – 6 s
Duty class	Continuous operation	Continuous operation
Intermittent operation	100%	100%
Power supply	100 – 240 Vac 50/60 Hz	100 – 240 Vac 50/60 Hz
Rated power	40 W	70 W
Stand-by	8 W	8 W
Rated load	20 Nm	40 Nm
Protection Rating	IP 20	IP 20
Operating temperature	 -15 °C  +50 °C	 -15 °C  +50 °C
Storage temperature (*)	 -20 °C  +70 °C	 -20 °C  +70 °C
Average life (**)	5.000.000 cycles	5.000.000 cycles
Power output for accessories	12 Vdc (1A max)	12 Vdc (1A max)
Power output for electric locks and electronic locks	12 Vdc (1A max) / 24 Vdc (0,5 A max)	12 Vdc (1A max) / 24 Vdc (0,5 A max)
Firmware update	USB / micro SD	USB / micro SD
Function selector device	FSD5, FSD6	FSD5, FSD6
Battery power device	SWBD	SWBD

(*) Before installing the product, keep it at room temperature where it has previously been stored or transported at a very high or very low temperature.

(**) The average product life specified should be understood purely as an indicative estimate. It applies to normal usage conditions and where the product has been installed and maintained in compliance with the instructions provided in the technical manual. The average product life is also affected, including significantly, by other variables such as, but not limited to, climatic and environmental conditions. The average product life should not be confused with the product warranty.

N.B. The technical data above refer to average conditions of use and cannot be certain in each case. Each automatic entrance variables such as: friction, balancing and environmental conditions that may substantially change both the duration and the quality of the operation of the automatic or some of its components, including the automation. The installer must to adopt adequate safety coefficients for each particular installation.

3. STANDARD INSTALLATION

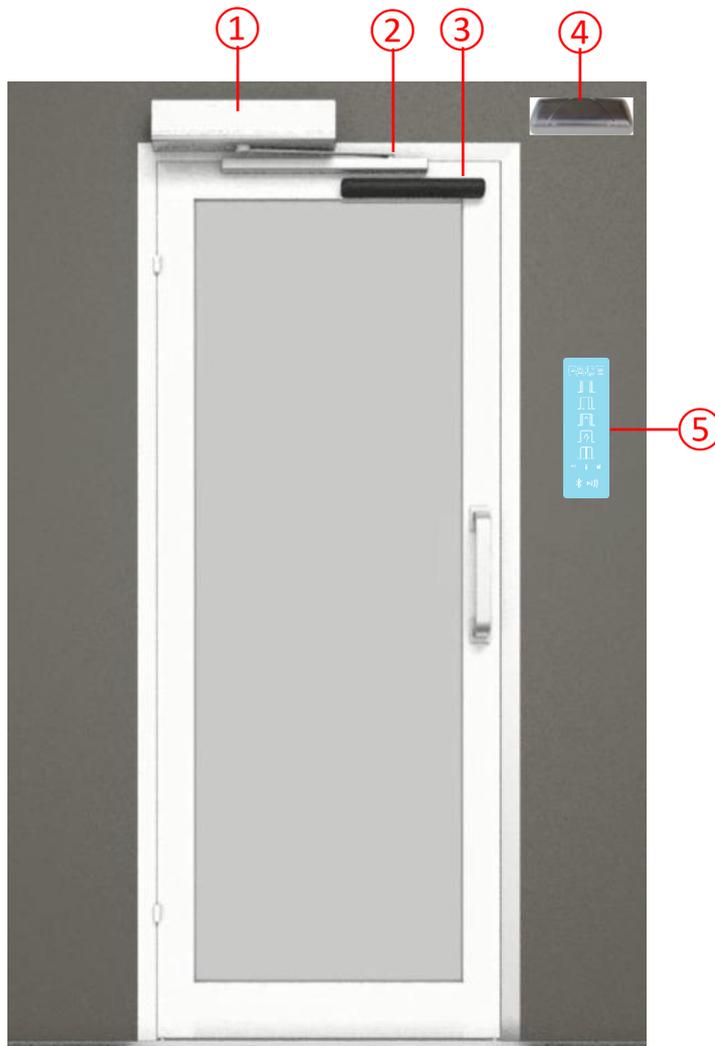

Rif.	Code	Description
1	SW2	SW2 automation (Light) for swing doors
	SW5	SW5 automation (Heavy) for swing doors
2	SWSA	Sliding arm
3	SD3	Safety sensor
4	OS1, OS2	Opening sensor
5	FSD5, FSD6	Electronic function selector
-	SWBD	Battery power device


Note: Components and codes are those most commonly used in systems for automatic swing doors. The full range of equipment and accessories is also available in the sales list.

The given operating and performance features can only be guaranteed with use of FACE accessories and safety devices.

4. ASSEMBLY PROCEDURE OF THE AUTOMATION

Check the stability, the weight of the leaf and that the movement is smooth and without friction (if necessary to reinforce the frame). Any closing door device must be removed or completely deactivated.

The tightening torque of the screws is shown in the following table.

Screw type	Torque
 M8 x 30 mm	5 Nm
 M6 x 10 mm	5 Nm
 M10 x 16 mm	4 Nm
 M5 x 12 mm	5 Nm
 2,9 x 13 mm	1 Nm

4.1 (SW2) INSTALLATION OF AUTOMATION WITH SLIDING ARM TO PULL

Use the sliding arm to pull with doors which open inside (view from the automation).



Remove the cover and fix the automation in a stable and leveled way to the wall using screws with a diameter ≥ 4.8 mm, using the measurements shown in the figure. Refer to the axis of the door hinges.

Fix the sliding arm on the door as shown in the figure. Insert the sliding arm in the guide and fix to the automation.

Note: if necessary, you can change the measure H, between the automation and the door, by replacing the spacer, using the codes listed in the table.

Move the door manually, and verify the correct opening and closing smoothly.

Adjust the opening mechanical stop inside the sliding arm.

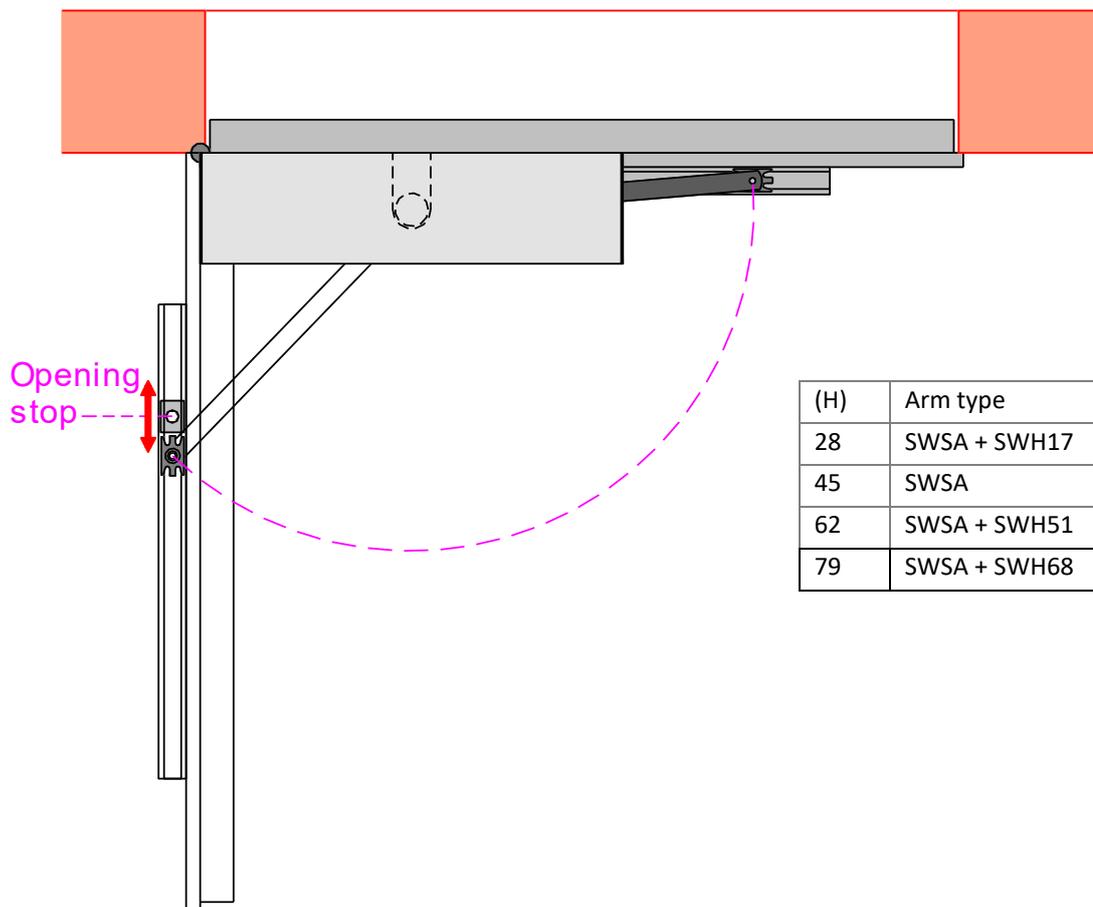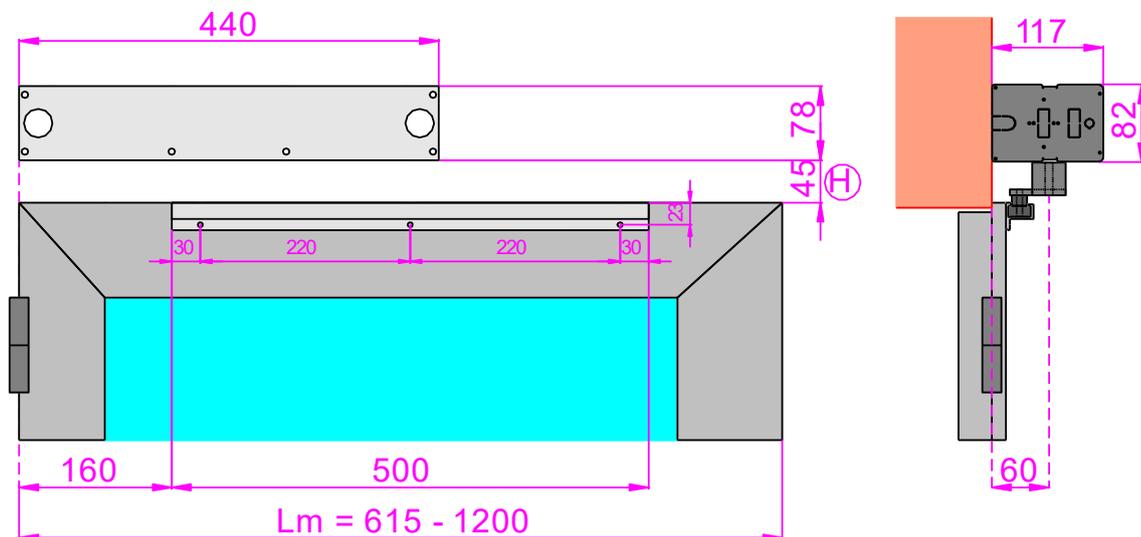

(H)	Arm type
28	SWSA + SWH17
45	SWSA
62	SWSA + SWH51
79	SWSA + SWH68

CLOSING OF THE AUTOMATION COVER

Fix the cover to the end caps using the supplied screws.

4.2 (SW2) INSTALLATION OF AUTOMATION WITH ARTICULATED ARM TO PUSH

Use the articulated arm to push with doors which open outside (view from the automation).

Remove the cover and fix the automation in a stable and leveled way to the wall using screws with a diameter ≥ 4.8 mm, using the measurements shown in the figure. Refer to the axis of the door hinges.

Fix the bracket of the articulated arm on the door, using the measurements shown in the figure.

Note: if necessary, you can change the measure H, between the automation and the door, by replacing the spacer, using the codes listed in the table.


Fix the articulated arm to the automation, and fix the other end of the articulated arm to the door.

Move the door in the closed position, and adjust the length of the half-arm [A] so that the angle between the two half-arms [A] and [B] is the greater possible.


Move the door manually, and verify the correct opening and closing smoothly.

If desired, it is possible to install the open door mechanical stop, as shown in the figure.

Note: the mechanical stop on the floor must be fixed in a visible position and must not create tripping hazard.

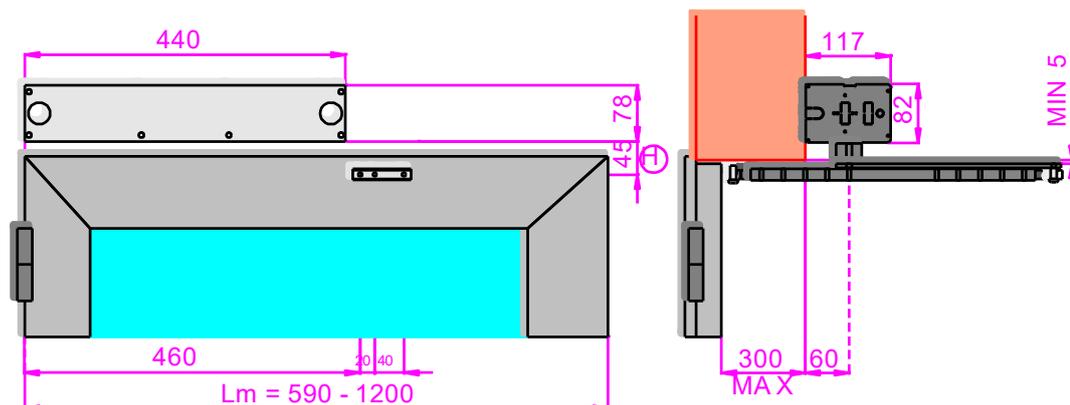

(H)	Arm type
28	SWAA + SWH17
45	SWAA
62	SWAA + SWH51
79	SWAA + SWH68
96	SWAA + SWH85

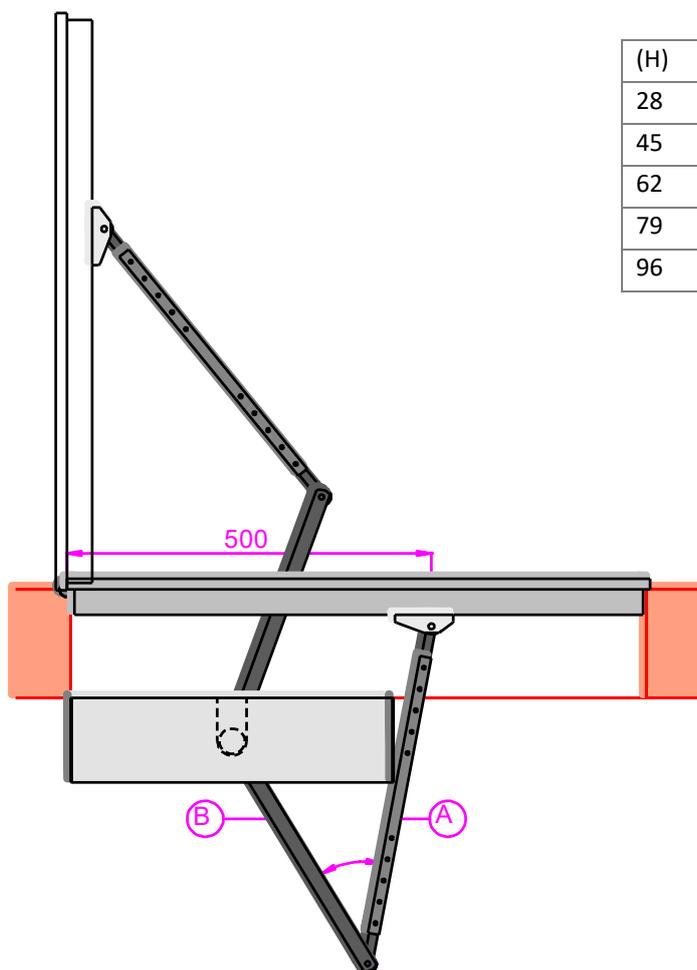

CLOSING OF THE AUTOMATION COVER

Fix the cover to the end caps using the supplied screws.

4.3 (SW2) INSTALLATION OF AUTOMATION WITH SLIDING ARM TO PUSH

Use the sliding arm to push with doors which open outside (view from the automation).


Remove the cover and fix the automation in a stable and leveled way to the wall using screws with a diameter ≥ 4.8 mm, using the measurements shown in the figure. Refer to the axis of the door hinges.

Fix the sliding arm on the door as shown in the figure. Insert the sliding arm in the guide and fix to the automation. If the leaf width is reduced, shorten the sliding guide and the sliding arm.



Note: if necessary, you can change the measure H, between the automation and the door, by replacing the spacer, using the codes listed in the table.

Move the door manually, and verify the correct opening and closing smoothly.

Adjust the opening mechanical stop inside the sliding arm.

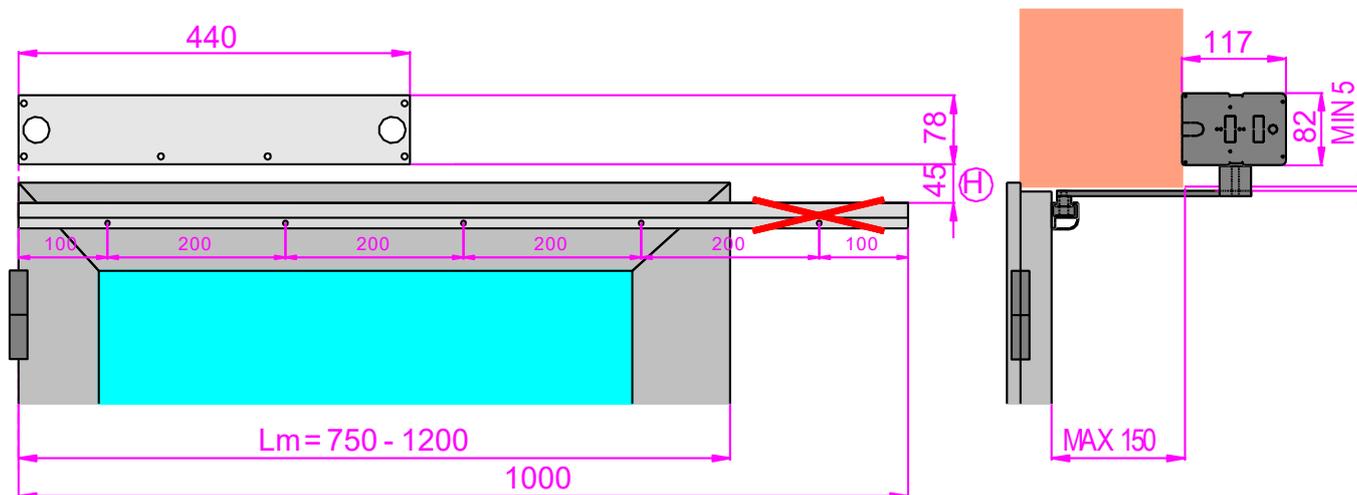

(H)	Arm type
28	SWSA1 + SWH17
45	SWSA1
62	SWSA1 + SWH51
79	SWSA1 + SWH68

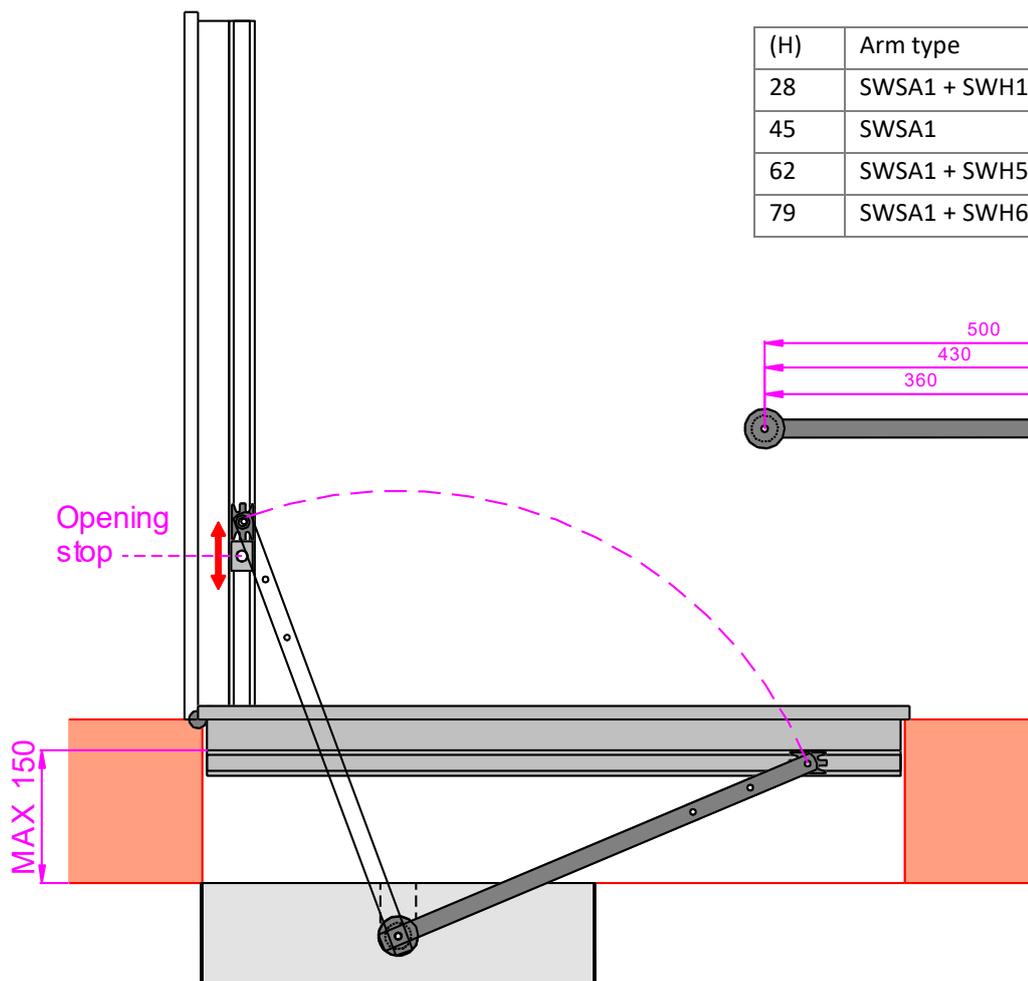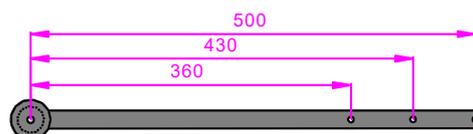

CLOSING OF THE AUTOMATION COVER

Fix the cover to the end caps using the supplied screws.

4.4 (SW5) INSTALLATION OF AUTOMATION WITH SLIDING ARM TO PULL

Use the sliding arm to pull with doors which open inside (view from the automation).


Remove the cover and fix the automation in a stable and leveled way to the wall using screws with a diameter ≥ 4.8 mm, using the measurements shown in the figure. Refer to the axis of the door hinges.

Fix the sliding arm on the door as shown in the figure. Insert the sliding arm in the guide and fix to the automation.

Note: if necessary, you can change the measure H, between the automation and the door, by replacing the spacer, using the codes listed in the table.

Move the door manually, and verify the correct opening and closing smoothly.

Adjust the opening mechanical stop inside the sliding arm.

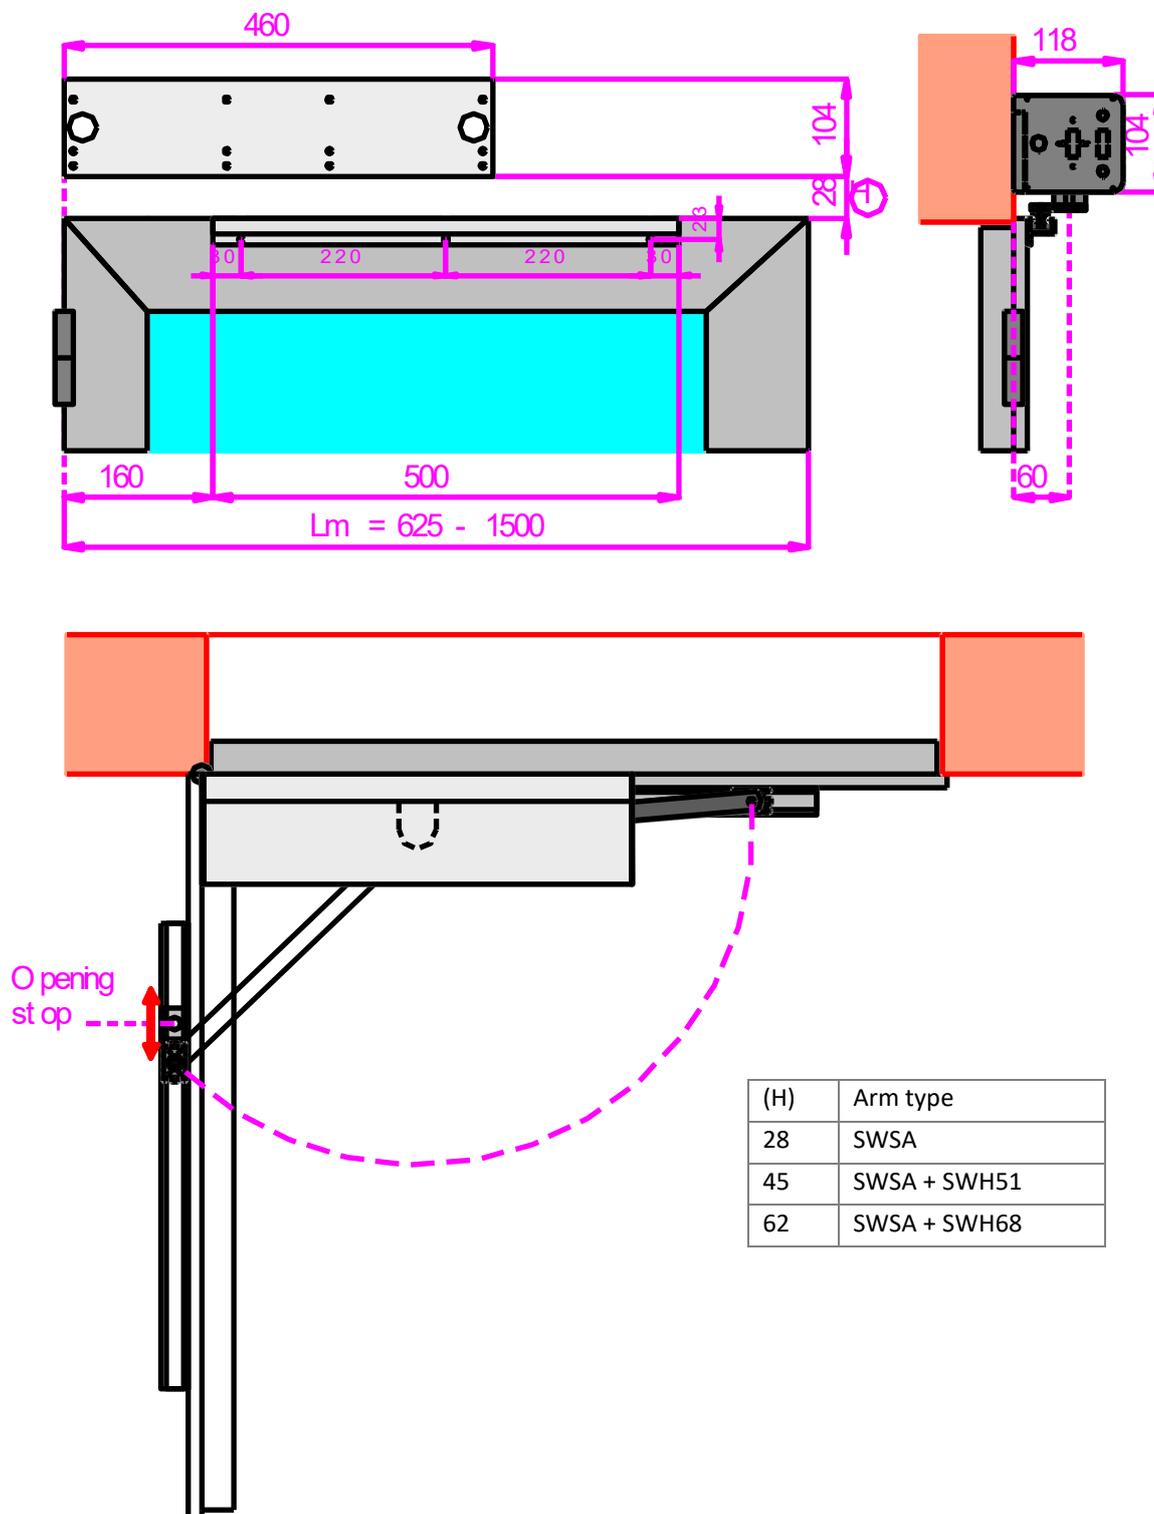

CLOSING OF THE AUTOMATION COVER

Insert the cover profile in the base profile. Fix the cover to the end caps using the supplied screws.

4.5 (SW5) INSTALLATION OF AUTOMATION WITH ARTICULATED ARM TO PUSH

Use the articulated arm to push with doors which open outside (view from the automation).

Remove the cover and fix the automation in a stable and leveled way to the wall using screws with a diameter ≥ 4.8 mm, using the measurements shown in the figure. Refer to the axis of the door hinges.

Fix the bracket of the articulated arm on the door, using the measurements shown in the figure.

Note: if necessary, you can change the measure H, between the automation and the door, by replacing the spacer, using the codes listed in the table.



Fix the articulated arm to the automation, and fix the other end of the articulated arm to the door.

Move the door in the closed position, and adjust the length of the half-arm [A] so that the angle between the two half-arms [A] and [B] is the greater possible.

Move the door manually, and verify the correct opening and closing smoothly.

If desired, it is possible to install the open door mechanical stop, as shown in the figure.

Note: the mechanical stop on the floor must be fixed in a visible position and must not create tripping hazard.

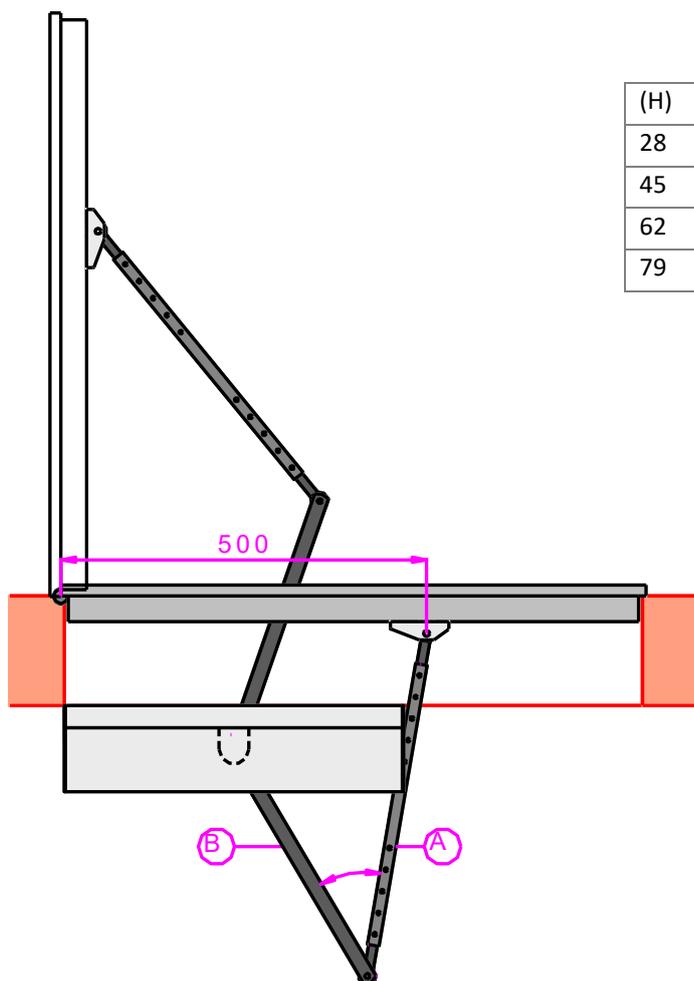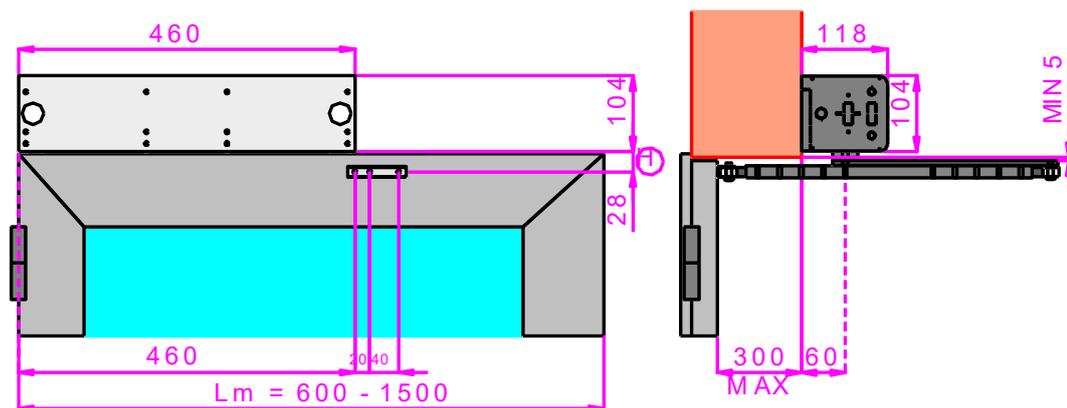

(H)	Arm type
28	SWAA
45	SWAA + SWH51
62	SWAA + SWH68
79	SWAA + SWH85

CLOSING OF THE AUTOMATION COVER

Insert the cover profile in the base profile. Fix the cover to the end caps using the supplied screws.

4.6 (SW5) INSTALLATION OF AUTOMATION WITH SLIDING ARM TO PUSH

Use the sliding arm to push with doors which open outside (view from the automation).


Remove the cover and fix the automation in a stable and leveled way to the wall using screws with a diameter ≥ 4.8 mm, using the measurements shown in the figure. Refer to the axis of the door hinges.

Fix the sliding arm on the door as shown in the figure. Insert the sliding arm in the guide and fix to the automation. If the leaf width is reduced, shorten the sliding guide and the sliding arm.


Note: if necessary, you can change the measure H, between the automation and the door, by replacing the spacer, using the codes listed in the table.

Move the door manually, and verify the correct opening and closing smoothly.

Adjust the opening mechanical stop inside the sliding arm.

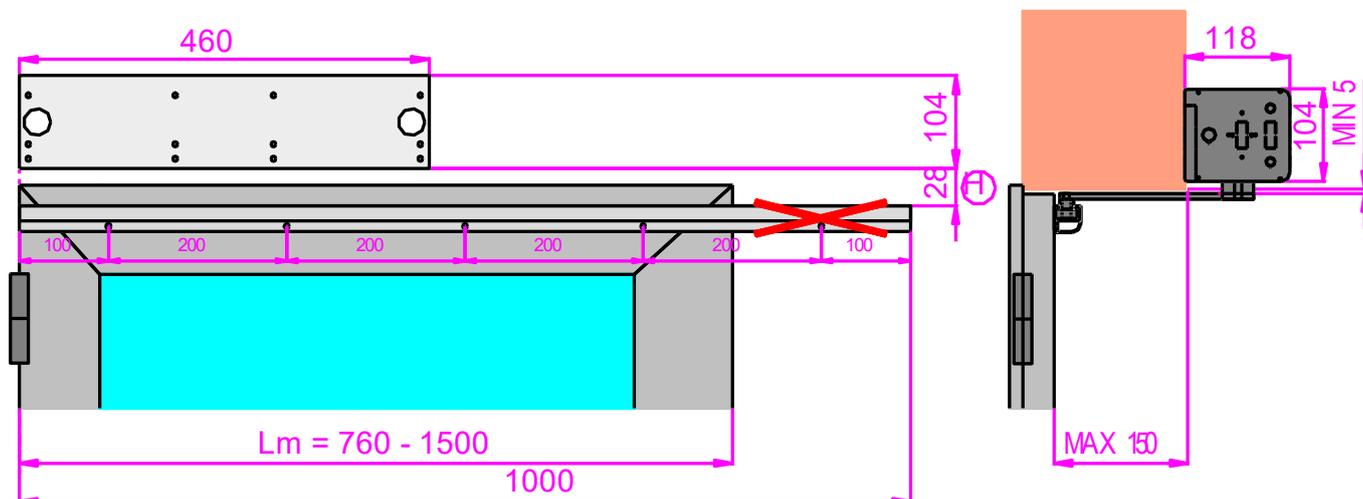


(H)	Arm type
28	SWSA1
45	SWSA1 + SWH51
62	SWSA1 + SWH68

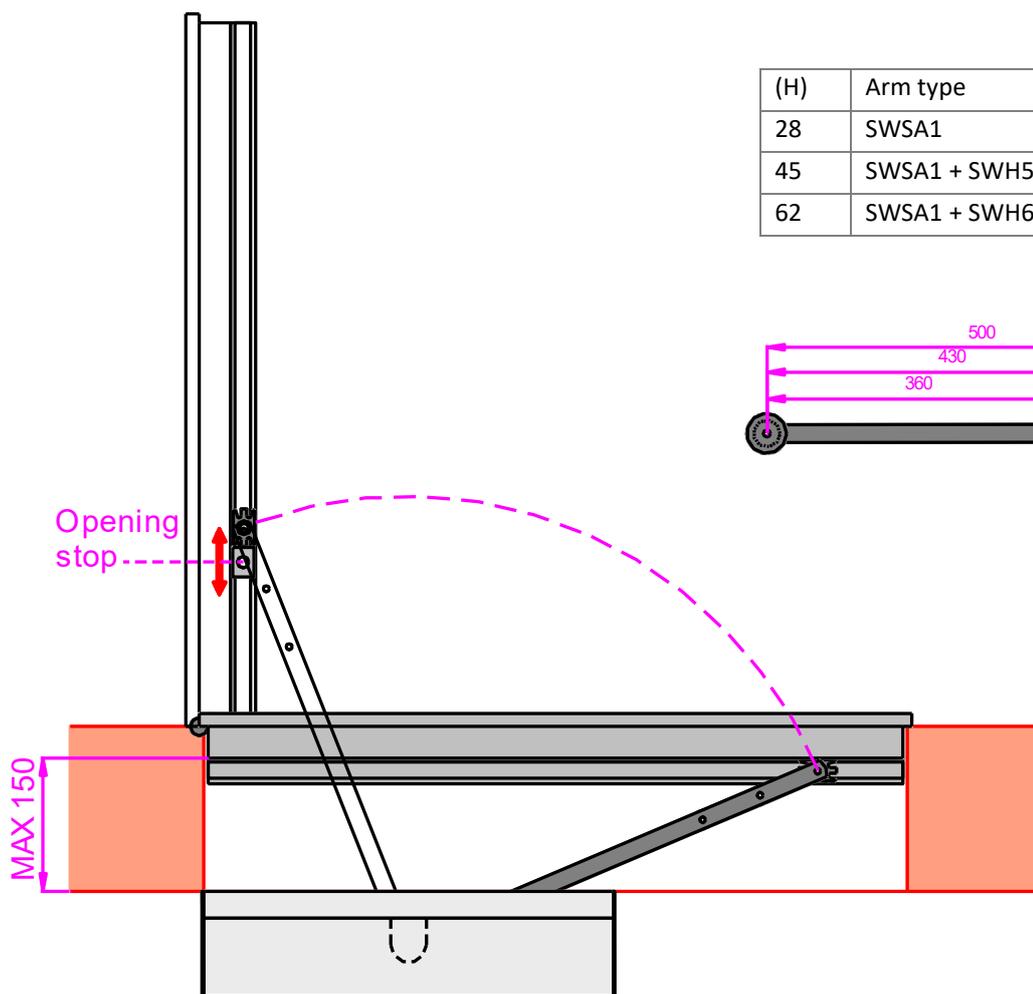

CLOSING OF THE AUTOMATION COVER

Insert the cover profile in the base profile. Fix the cover to the end caps using the supplied screws.

5. ELECTRICAL CONNECTIONS

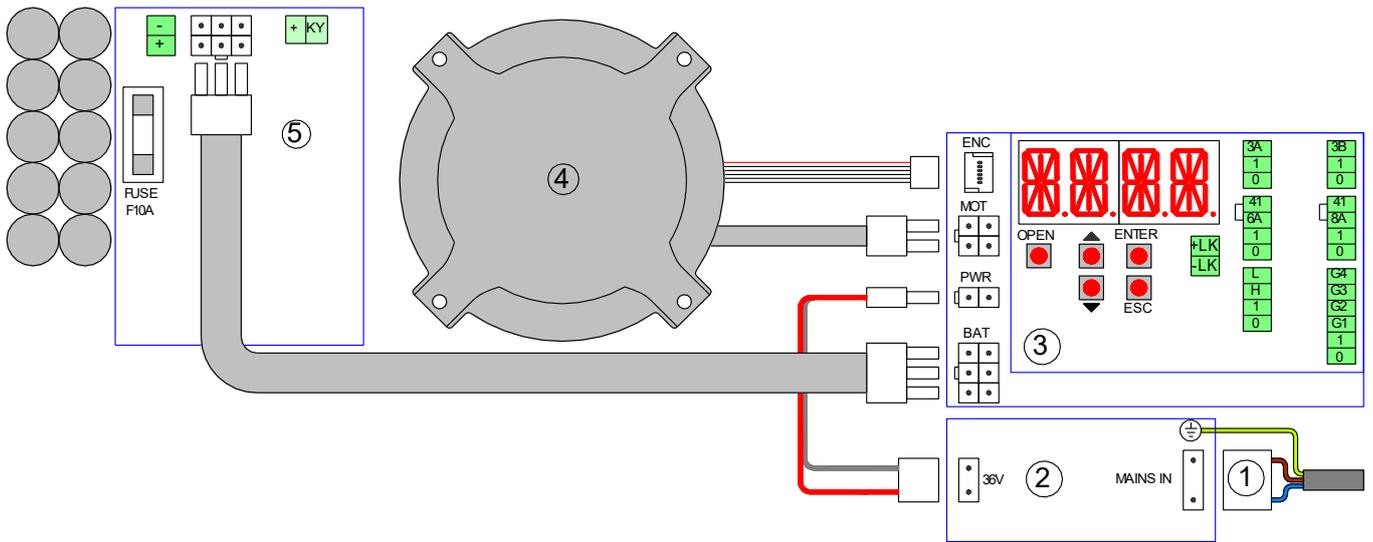

Rif.	Code	Terminals	Description
1	2329	MAINS IN	Cable for connection to the power supply.
2	3TFEPS6536C	PWR	Switching power supply 36V 65W (for SW2 automation)
	3TFEPS7536C	PWR	Switching power supply 36V 75W (for SW5 automation)
3	5CB03		Electronic control
4	2B9015	MOT	Brushless motor (for SW2 automation)
	2B9030	MOT	Brushless motor (for SW5 automation)
		ENC	Angular sensor
5	SWBD	BAT	Battery power device

5.1 GENERAL SAFETY ELECTRICAL PRECAUTIONS

Installation, electrical connections and adjustments must be completed in conformity with Good Working Methods and with regulations in force.

Before making power connections, check that the rating corresponds to that of the mains supply. A multipolar disconnection switch with a contact opening gap of at least 3 mm must be included in the mains supply. This switch must be protected from unauthorized activations.

Check that, upstream of the electrical installation, an adequate residual current circuit breaker and an overcurrent cut out are fitted.

Connect the automation to an effective earthing system carried out as indicated by current safety regulations.

During installation, maintenance and repair operations, cut off the power supply before opening the cover to access the electrical parts. To handle electronic parts, wear earthed antistatic conductive bracelets.

FACE declines all responsibility in the event of components which are not compatible with the safe and correct operation of the product.

For repairs or replacements of products only original spare parts must be used.

5.2 POWER SUPPLY ELECTRICAL CONNECTION


The connection to the mains supply can be done in one of the two following ways.

1) ELECTRICAL CONNECTION THROUGH THE AUTOMATION BASE

Use the electric cable and the supplied terminals for the connection to the mains supply through a channel in the wall, previously made. Note: Shorten the electric cable to the desired size.

Make sure there are no sharp edges that might damage the electric cable.


For the connection to the mains supply use an independent channel, separated from the connections to control and safety devices.

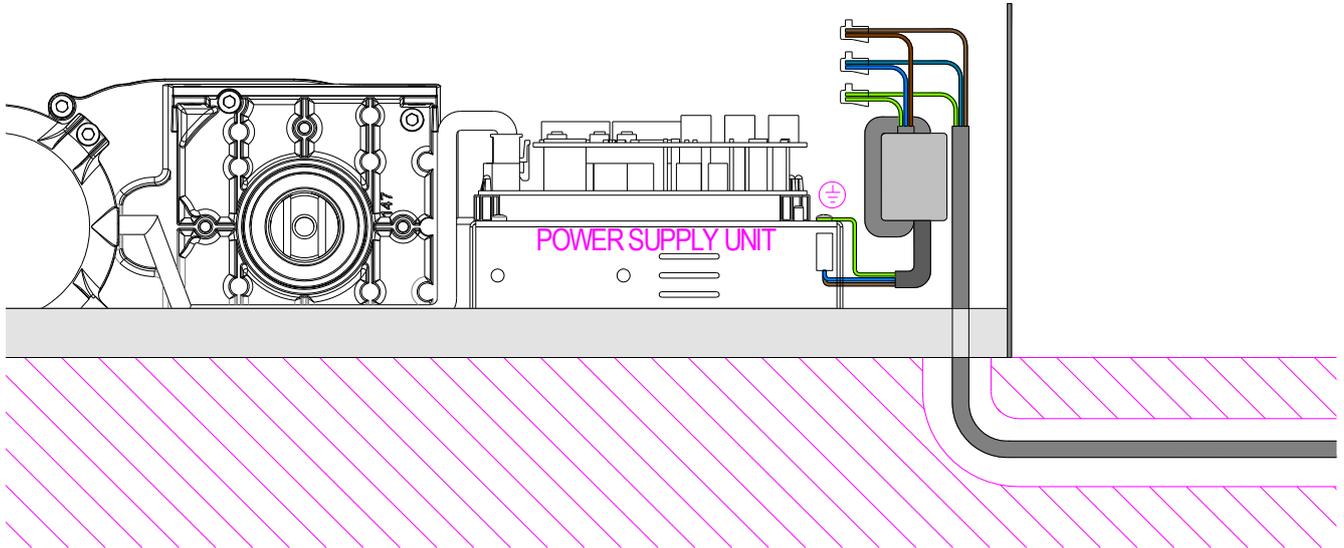


2) ELECTRICAL CONNECTION THROUGH THE AUTOMATION END CAP

If the path of the electric cable is outer the wall, drill the end cap on the suitable area, fix the electric cable using a supplied PG9 cable gland.

Connect the electric cable to the junction box (using the supplied terminals), or connect the electric cable to the wall socket using an electrical plug (not supplied by us).

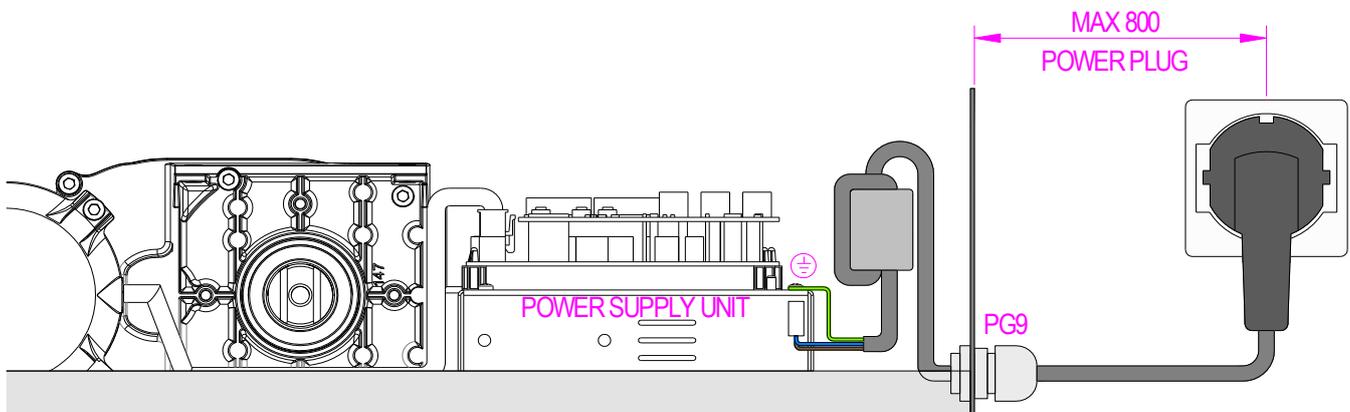

5.3 ELECTRONIC CONTROL TERMINALS

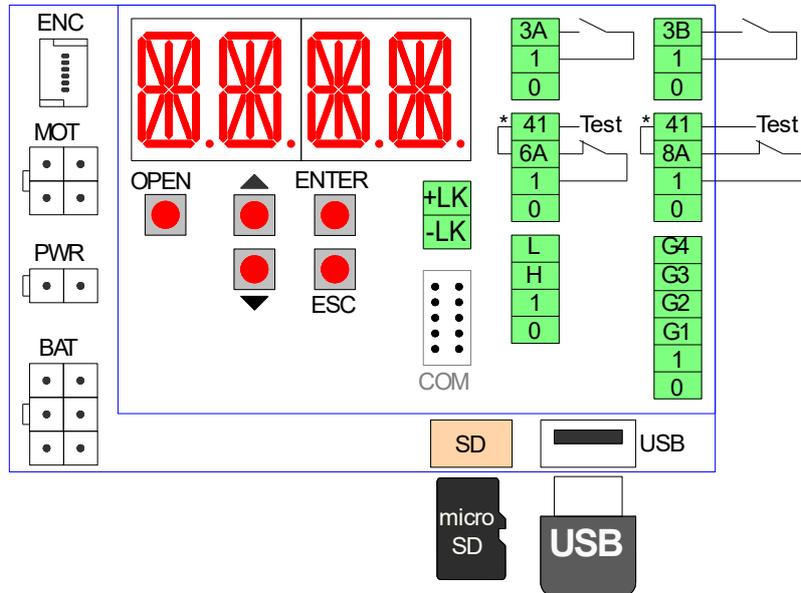

Note: The terminals with the same number are equivalent.

The electronic control comes with the jumpers on the terminals with an asterisk [*]. When connecting safety devices remove the jumpers of the corresponding terminals.

Terminals	Description
0 – 1	Output 12 Vdc for external powering accessories. The maximum absorption of 1 A corresponds to the sum of all the terminals 1 (+12V).
1 – 3A	Contact N.O. opening A side (interior side).
1 – 3B	Contact N.O. opening B side (outer side).
1 – 8A	Closing safety contact N.C. The opening of the contact causes the reversal of the movement. Note: connect safety devices with test (see terminal 41), and remove the jumper 41 - 8A.
1 – 6A	Opening safety contact N.C. The opening of the contact stops the movement during the opening phase; the door closes after 3s. If the automation is closed, the opening of the contact prevents the opening. Note: connect safety devices with test (see terminal 41), and remove the jumper 41 - 6A.
41	Test output (+12 V). Connect the safety devices with test (in accordance with EN 16005), as indicated in the following chapters. Note: in case of devices without test, connect the N.C. contact to terminals 41 - 8A or 41 - 6A.
1 – G1/G2/G3/G4	Input terminal provided for general use.
0 – G1/G2	Output terminal (12 Vdc, 30 mA max) provided for general use. Using the ADV > STG1/STG2/STG3/STG4 menu you can choose a specific function to the G1/G2/G3/G4 terminal.
0 – 1 – H – L	Bus connection to the function selector.
+LK / -LK	Output 12Vdc (1 A max) / 24Vdc (0,5 A max) for electric lock.
USB	USB standard. Allows saving the door settings and loading the firmware updates.
SD	Micro SD standard. Allows saving the door settings and loading the firmware updates.
COM	Connection for remote communication

Buttons	Description
OPEN	Open the door.
↑	Scroll the menu and increase of selected values.
↓	Scroll the menu and reduction of selected values.
ENTER	Button to select the menu and save the selected data.
ESC	Exit the menu.


5.4 ELECTRICAL CONNECTION OF FUNCTION SELECTOR

Connect the 0-1-H-L terminals of the function selector, by cable (not supplied by us), to the 0-1-H-L terminals of the electronic control.

Note: for lengths over 10 m, use a cable with 2 twisted-pairs.



ATTENTION: the function selector must be used by authorized personnel only; if it is installed in a place accessible to the public, the function selector must be protected by a proximity badge (13.56MHz ISO15693 and ISO14443 Mifare) or by a numeric code (max 40 badges and codes).

The function selector allows the following settings.

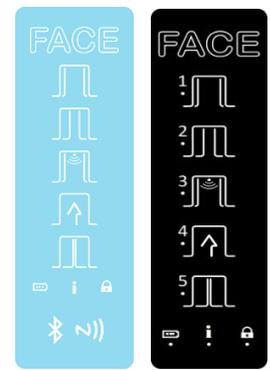

Symbol	Description
	<p>OPEN DOOR When selected, the symbol lights up, the door is permanently open. Note: the leaves can still be handled manually.</p> <p>LOW SPEED OPERATION Select the symbol for 5 seconds (double beep), the AUTOMATIC symbol flashes and the door works without safety sensors with reduced speed. Note: this mode must be used temporarily in the event of a malfunction of the safety sensors.</p>
	<p>AUTOMATIC PARTIAL OPERATION In the case of a door with 2 automations, when selected, the symbol lights and allows the automatic operation of only one leaf.</p>
	<p>AUTOMATIC BI-DIRECTIONAL OPERATION When selected, the symbol lights up, the door works automatic in bidirectional mode.</p> <p>RESET Select the symbol for 5 seconds, the automation performs the self-test and the automatic learning.</p>
	<p>AUTOMATIC ONE-WAY OPERATION When selected, the symbol lights up and automatic operation of the door is in one-way mode.</p>
	<p>CLOSED DOOR When selected, the door is permanently closed. Note: using the menu SEL > DLAY you can adjust the delay time to close the door.</p> <p>MANUAL OPERATION (SEL > MODE = OFF) Select the symbol for 3 seconds, the symbol flashes and the door can be moved manually. Note: the control and safety sensors are deactivated.</p>
	<p>PROTECTED FUNCTION SELECTOR The symbol lights up if the function selector is protected. To activate the temporary operation of the function selector is necessary to approach the badge to the NFC symbol, or enter the code, or select for 3 seconds the logo.</p>
	<p>ACTIVATION OF FUNCTION SELECTOR BY LOGO (SEL>SECL=LOGO) Select the logo for 3 seconds (the lock symbol light off), the function selector is activated for 10 seconds. Expired the time the function selector switches off (the lock symbol lights up). Note: the function selector logo flashes when the CAN bus communication is not working (H-L terminals).</p>
	<p>ACTIVATION OF FUNCTION SELECTOR BY BADGE (SEL>SECL=TAG) Approach the badge to the NFC symbol (the lock symbol light off), the function selector is activated for 10 seconds. Expired the time the function selector switches off (the lock symbol lights up).</p>
1 2 3 4 5	<p>ACTIVATION OF FUNCTION SELECTOR BY NUMERIC CODE (SEL>SECL=TAG) Press the logo, enter the code (maximum 5 numbers), press the logo for confirmation, (the lock symbol light off), the function selector is activated for 10 seconds. Expired the time the function selector switches off (the lock symbol lights up).</p>
	<p>BATTERY SIGNAL Battery symbol off = the door is operating with the mains supply Battery symbol on = the door is operating with battery power Battery symbol flashing = the battery is low or disconnected</p>
	<p>INFORMATION SIGNAL Information symbol on = it is necessary to perform the ordinary maintenance of the door. Information symbol flashing = shows the presence of alarms: - 1 flash = failure of electronic control or locking device; - 2 flashes = mechanical failure; - 3 flashes = failure of sensor safety test; - 4 flashes = motor overtemperature.</p>

5.5 ELECTRICAL CONNECTION OF OPENING SENSOR

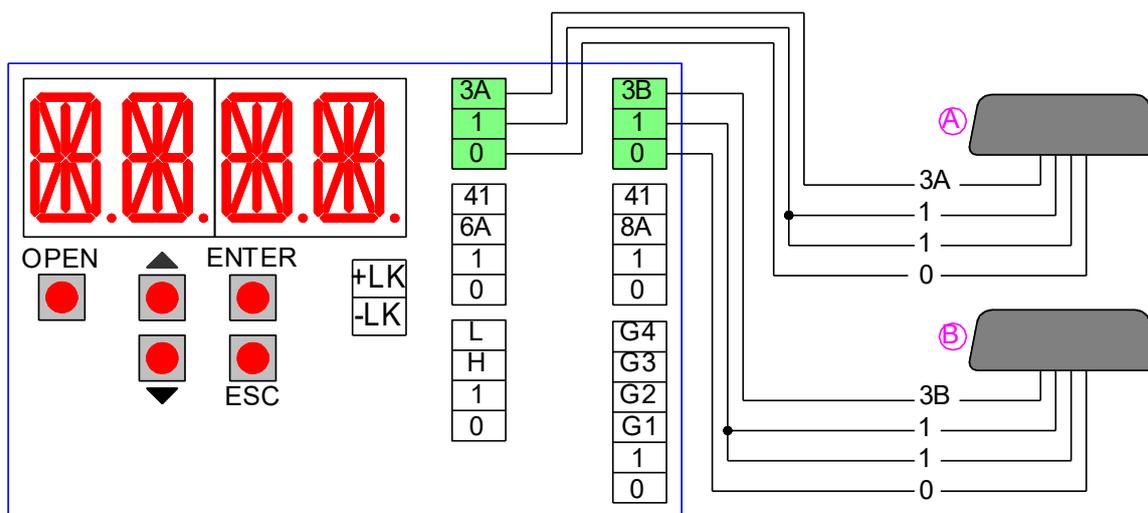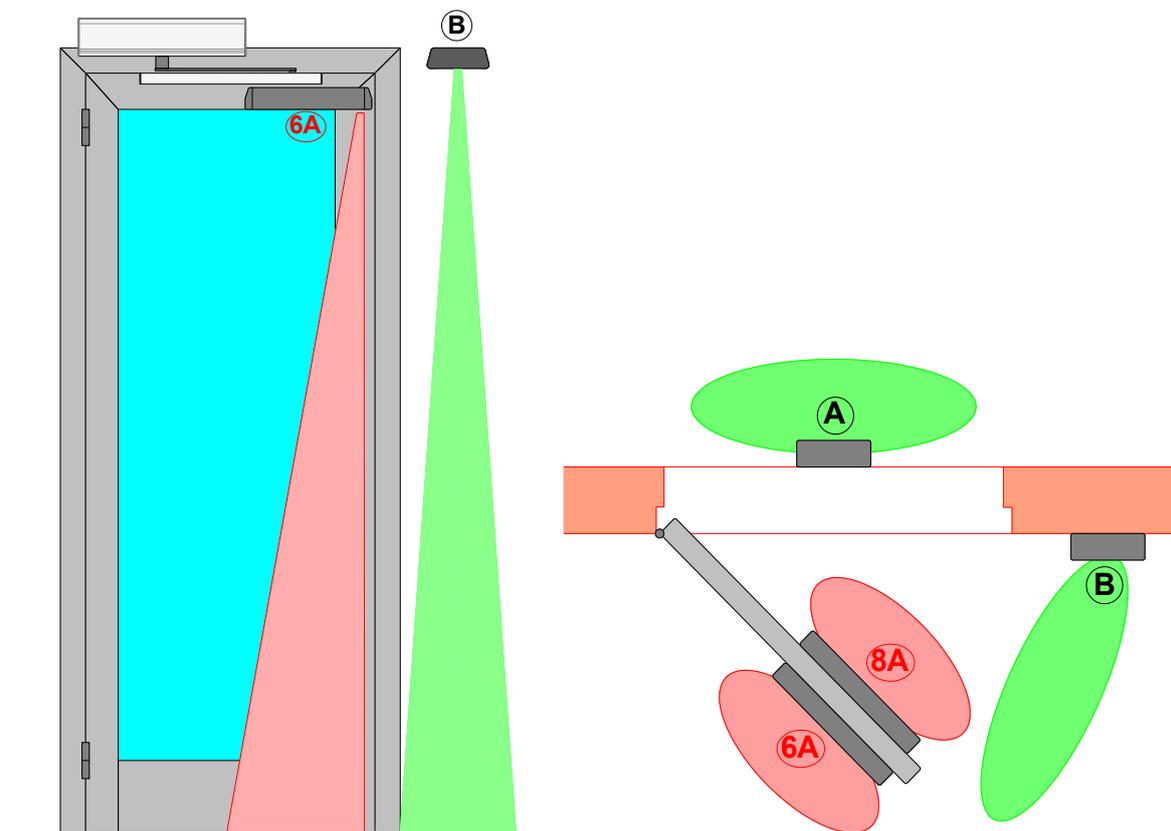

Connect the sensor, using the supplied cable to the terminals of the electronic control as follows:

	5CB03	OS1 (Prime Motion B), OS2 (Prime Motion C)	OS3 (HR50-UNI), OS4 (HR50)
OPENING	0	White	Grey
	1	Brown Yellow	Grey Yellow
	3A (3B)	Green	Yellow


For more information, check the installation manual of the sensor.

5.6 ELECTRICAL CONNECTION OF SAFETY SENSOR

The safety sensors should be installed directly on the leaf of the door, and protect both the opening and the closing of the swing door.


To simplify the installation of the safety sensors, you can choose one of the following two options.

- OPTION 1: Connect the 2 sensors to each other, using the supplied cable. Connect only one of the 2 sensors to the electronic control terminals, as shown below.

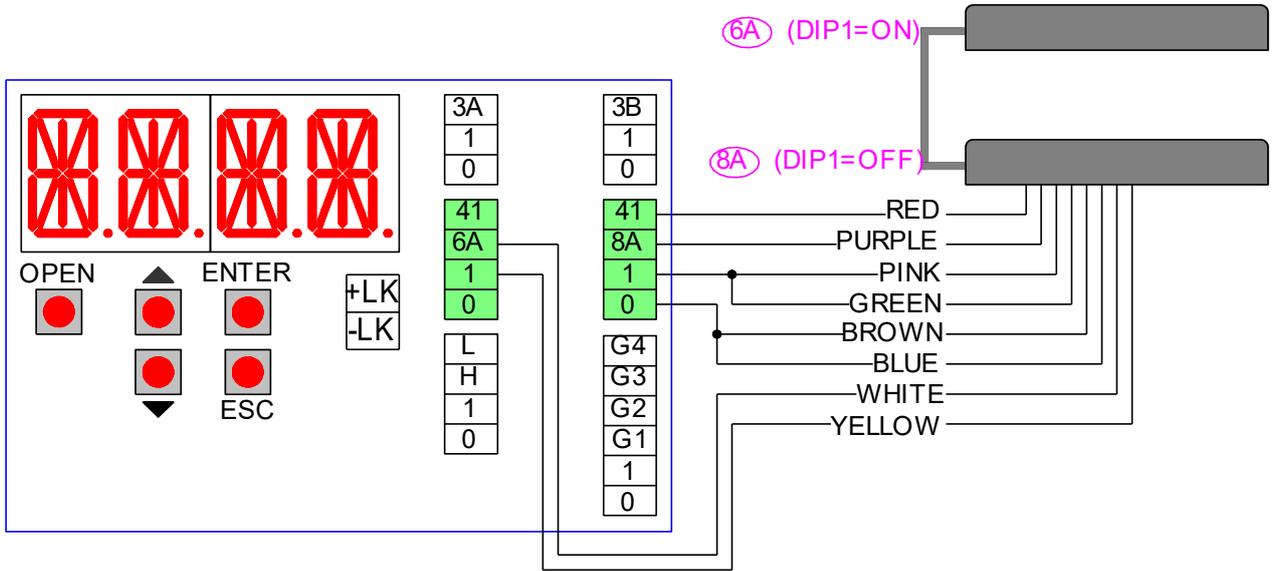

OPTION 1			OPTION 2				
	5CB03	SD3 (4SAFE ON SW)	SD4 (FLATSCAN SW)		5CB03	SD3 (4SAFE ON SW)	SD4 (FLATSCAN SW)
SAFETY	0			SAFETY	0	Brown Blue	Brown Blue
	1	Yellow	Yellow		1	Green Pink	Green Pink
	6A	White (DIP1=ON)	White (DIP1=ON)		8A	Purple (DIP1=OFF)	Grey (DIP1=OFF)
	41				41	Red	Red


- OPTION 2: Connect each sensor to the electronic control terminals, as shown below.

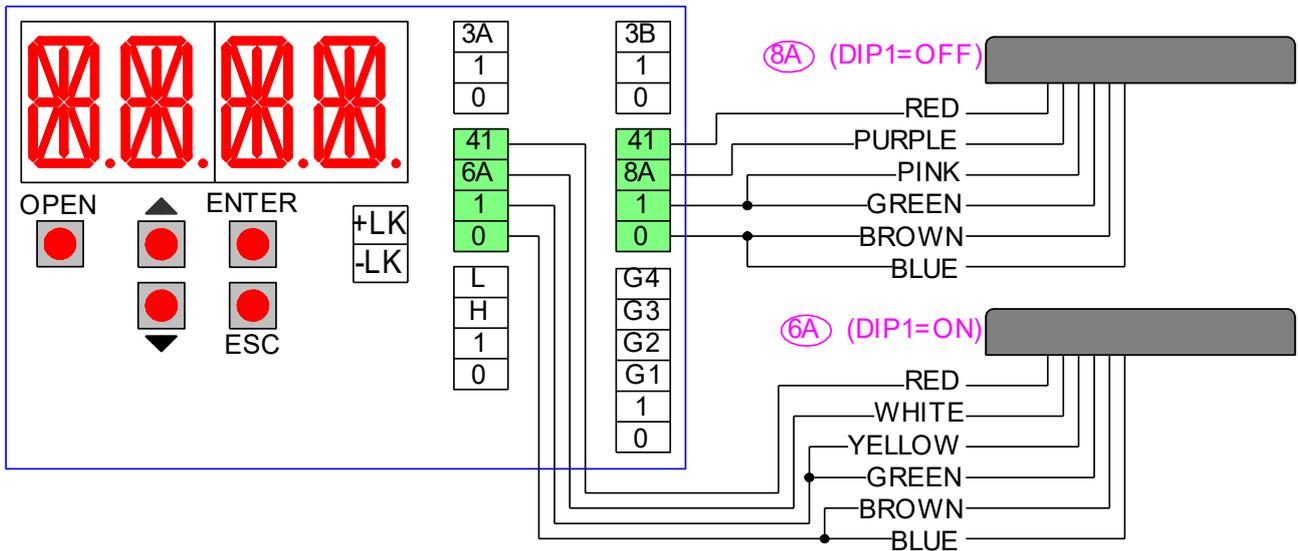


OPTION 1			OPTION 2				
	5CB03	SD3 (4SAFE ON SW)	SD4 (FLATSCAN SW)		5CB03	SD3 (4SAFE ON SW)	SD4 (FLATSCAN SW)
SAFETY	0	Brown Blue	Brown Blue	SAFETY	0	Brown Blue	Brown Blue
	1	Green Yellow	Green Yellow		1	Green Pink	Green Pink
	6A	White (DIP1=ON)	White (DIP1=ON)		8A	Purple (DIP1=OFF)	Grey (DIP1=OFF)
	41	Red	Red		41	Red	Red

For more information, check the installation manual of the sensor.

SD3 (4SAFE ON SW)

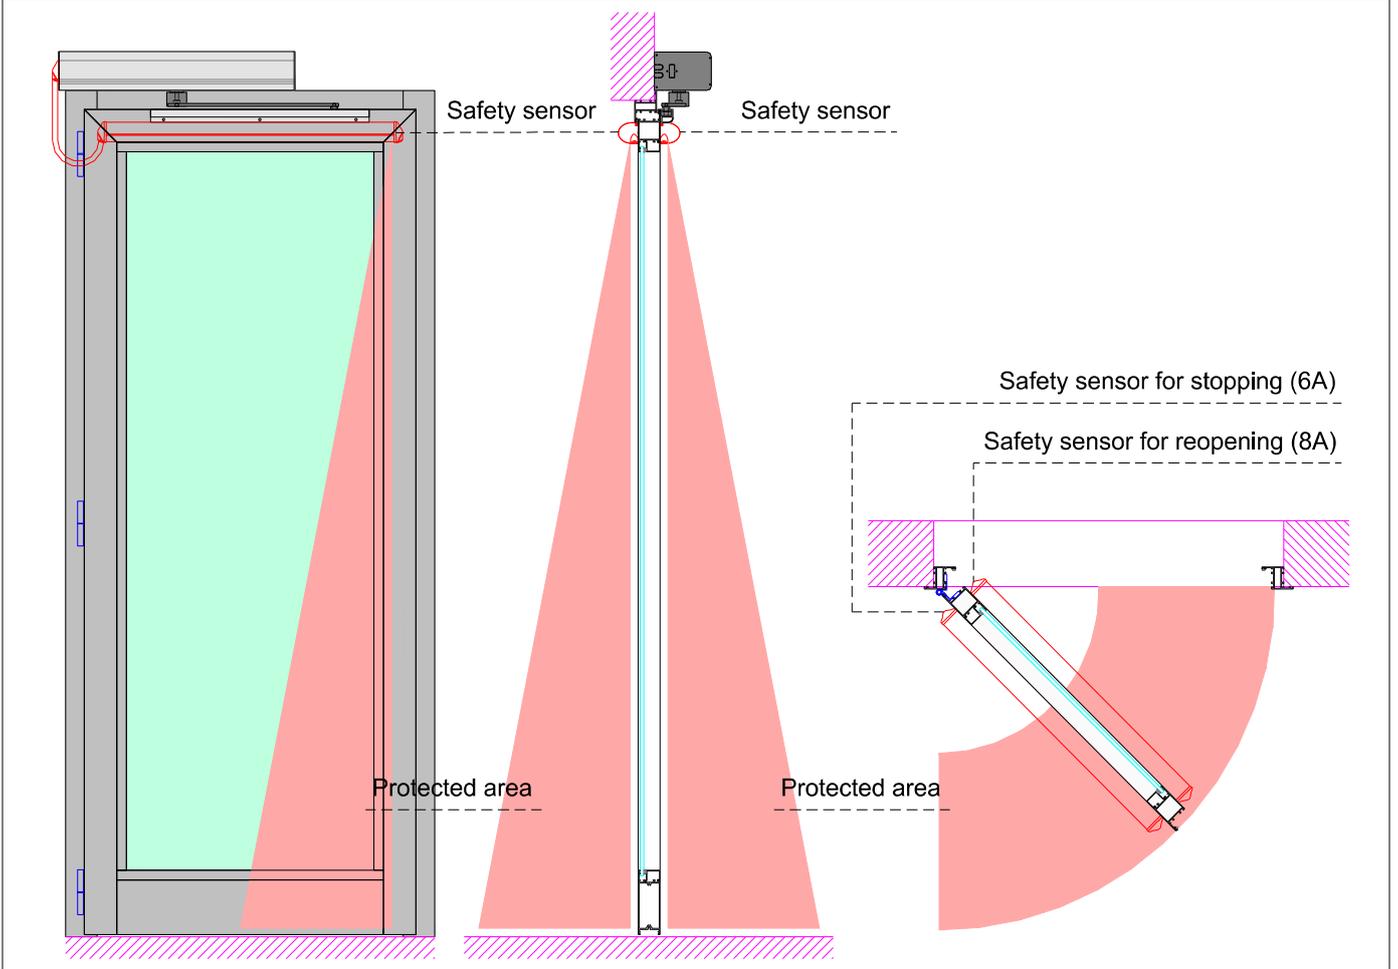

SD4 (FLATSCAN SW)

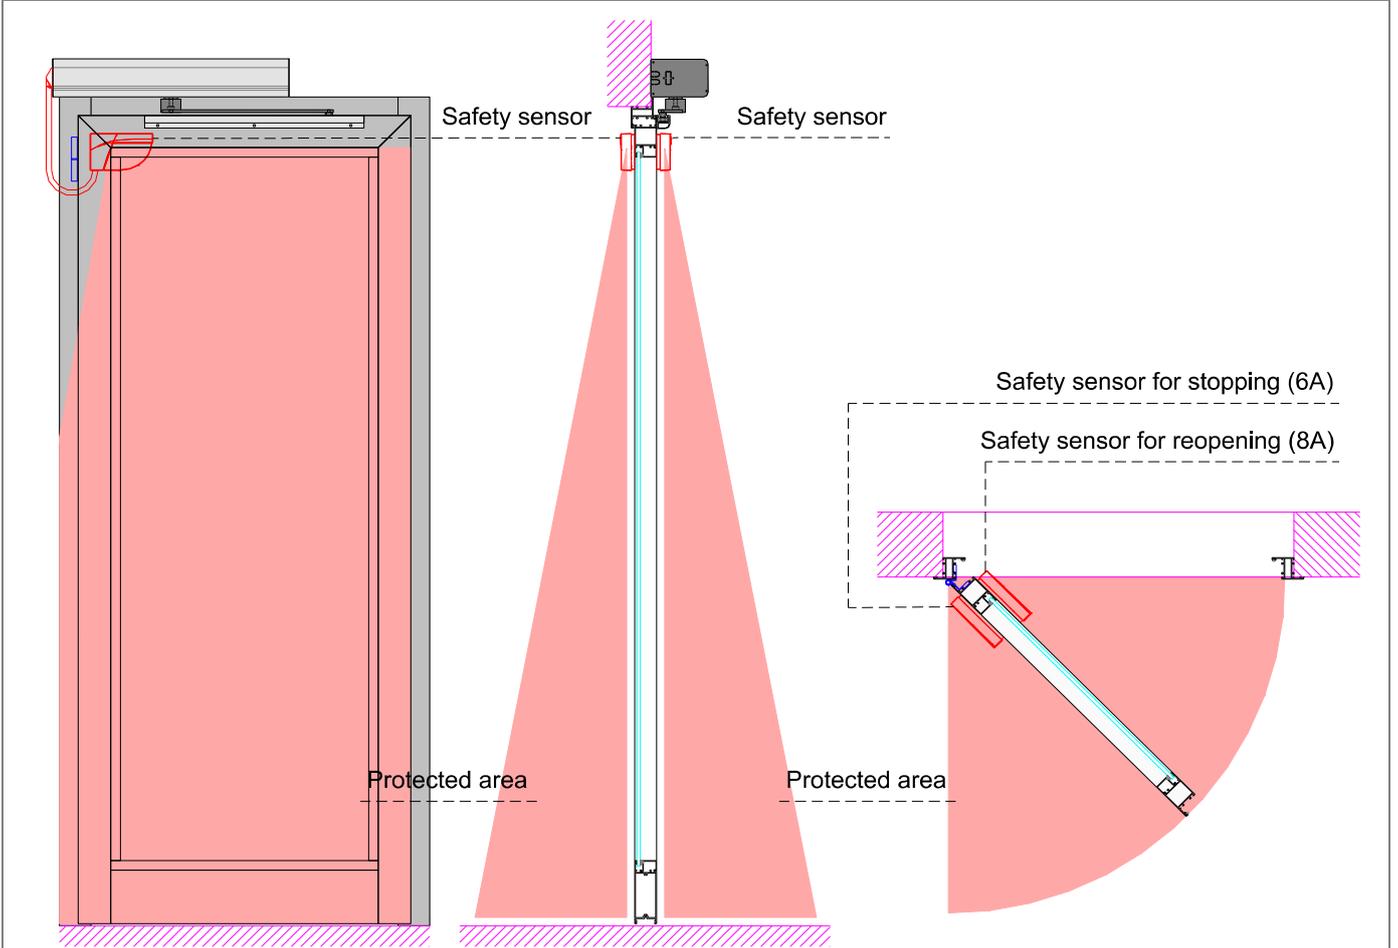


5.7 ADJUSTMENT OF THE SPEED OF THE DOOR (EN 16005 STANDARD, ANNEX G)

To reduce the speed of the door in area B not protected by safety sensors, make the following adjustments.

Adjust the opening speed (VOP) so as to open the door (from 0° to 80°) at the times indicated in the table.

Adjust the closing speed (VCL) so as to close the door (from 90° to 10°) at the times indicated in the table.

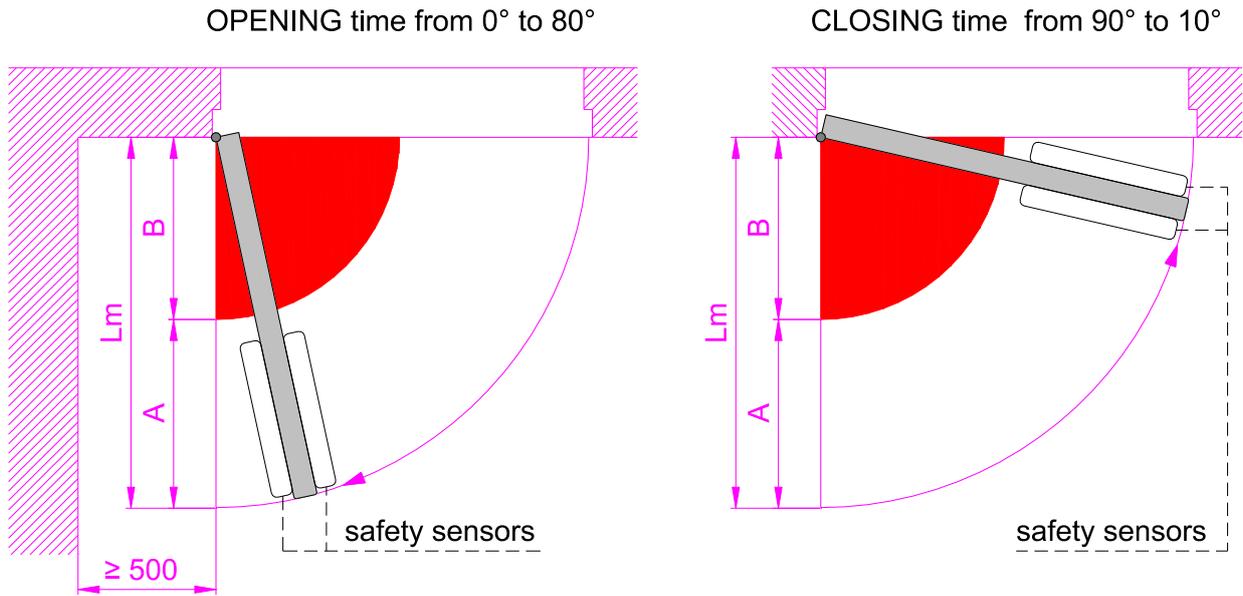

Lm [m]	Time [s]										
	1,0	1,5	2,0	2,5	3,0	3,5	4,0	4,5	5,0	5,5	6,0
	B [m]										
	0,16	0,24	0,32	0,40	0,48	0,56	0,64	0,72	0,80	0,88	0,95
A [m]											
0,7	0,54	0,46	0,38	0,30	0,22	0,14	0,06	-	-	-	-
0,8	0,64	0,56	0,48	0,40	0,32	0,24	0,16	0,08	-	-	-
0,9	0,74	0,66	0,58	0,50	0,42	0,34	0,26	0,18	0,10	0,02	-
1,0	0,84	0,76	0,68	0,60	0,52	0,44	0,36	0,28	0,20	0,12	0,05
1,1	0,94	0,86	0,78	0,70	0,62	0,54	0,46	0,38	0,30	0,22	0,15
1,2	1,04	0,96	0,88	0,80	0,72	0,64	0,56	0,48	0,40	0,32	0,25
1,3	1,14	1,06	0,98	0,90	0,82	0,74	0,66	0,58	0,50	0,42	0,35
1,4	1,24	1,16	1,08	1,00	0,92	0,84	0,76	0,68	0,60	0,52	0,45
1,5	1,34	1,26	1,18	1,10	1,02	0,94	0,86	0,78	0,70	0,62	0,55

5.8 LOW ENERGY

To reduce the force and kinetic energy of the door, make the following adjustments.

SW2: adjust the force PUSH ≤ 10.


SW5 with sliding arm: adjust the force PUSH ≤ 5.

SW5 with articulated arm: adjust the force PUSH ≤ 3.

Adjust the opening speed (VOP) so as to open the door (from 0° to 80°) at the times indicated in the table.

Adjust the closing speed (VCL) so as to close the door (from 90° to 10°) at the times indicated in the table.

Lm [m]	Door weight [kg]				
	50	60	70	80	90
Time [s]					
0,75 m	3,0	3,0	3,0	3,0	3,5
0,85 m	3,0	3,0	3,5	3,5	4,0
1,00 m	3,5	3,5	4,0	4,0	4,5
1,20 m	4,0	4,5	4,5	5,0	5,5

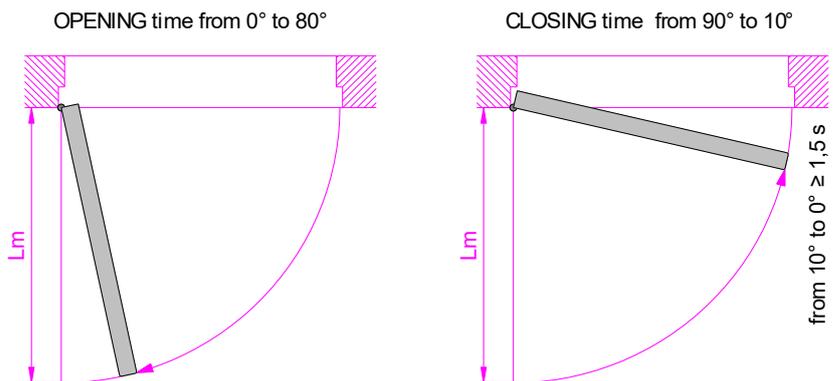

5.9 MANUAL OPERATING MODE - POWER ASSIST

Attention: the automation can be used in "Power assist" mode, only in the absence of users: elderly, infirm, disabled people, small children.

To choose the manual operating mode, set from the menu: ADV > HAND = PWAS / PUGO.

The "Power assist" manual operation is activated by manually pushing the swing door; the 6A safety sensor is deactivated and the door is opened manually and closes by means of the closing spring in low energy mode (low energy settings for closing shall follow the information in chapter 5.8).

If an opening command is given, the safety sensors are reactivated.

5.10 EMERGENCY EXIT

The automation for swing doors is suitable for use as an escape route and emergency exit.

Any locks installed must comply with the specific applicable standards.

5.10 ELECTRICAL CONNECTIONS OF ELECTRIC LOCK

Automations for swing doors are compatible with most of the electric locks available in the market. Verify that power supply of the electric lock is 12Vdc (1A max) or 24Vdc (0,5A max).


- Connect the electric lock to terminals LK + and -LK of the electronic control.
- Set the electric lock power supply, using menu: ADV > LKPW = 12 / 24.
- Set the type of electric lock operation, using menu: ADV > ELLK = LOCK / SAFE / AUTO.
- Set the start of the door opening delay time, using menu: ADV > TALK = from 0,5 to 5,0 seconds.
- Set the operating time of the electric lock, using menu: ADV > TRLK = from 0,5 to 10 seconds / CLOS (activation of the electric lock until the door is closed).

In the figure are shown the timing of the electric lock operation:

A = start of opening pulse and electric lock power supply on/off,

B = start of door opening,

C = end of electric lock power supply on/off.

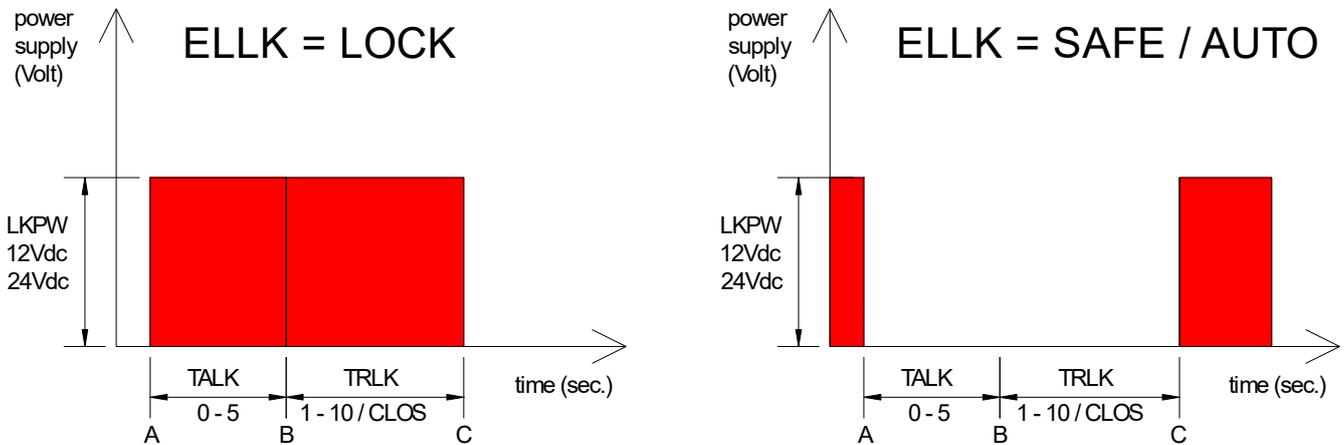

5.12 ELECTRICAL CONNECTION OF A DOOR WITH 2 LEAVES

To coordinate the operation of two automatic swing doors with the closing overlap of the leaves (see figure), procedures as follows.

Using a 3-wire cable (1-H-L), connect the 2 automations MASTER-SLAVE, as shown in the figure.

Network addresses must be assigned using the ADV > ID menu, as shown in the figure.



Using the menu of the electronic control, set: ADV> SYNC> MST1 on MASTER automation and ADV> SYNC> SLV1 on SLAVE automation.

REMOVE THE POWER SUPPLY, WAIT 5 SECONDS, RETURN THE POWER SUPPLY.

Connect the opening sensors as described in chapter 5.5 and connect the safety sensors as described in chapter 5.6.

Connect the function selector, as shown in the figure.

Note: the partial opening of only one leaf is referred to the MASTER automation.

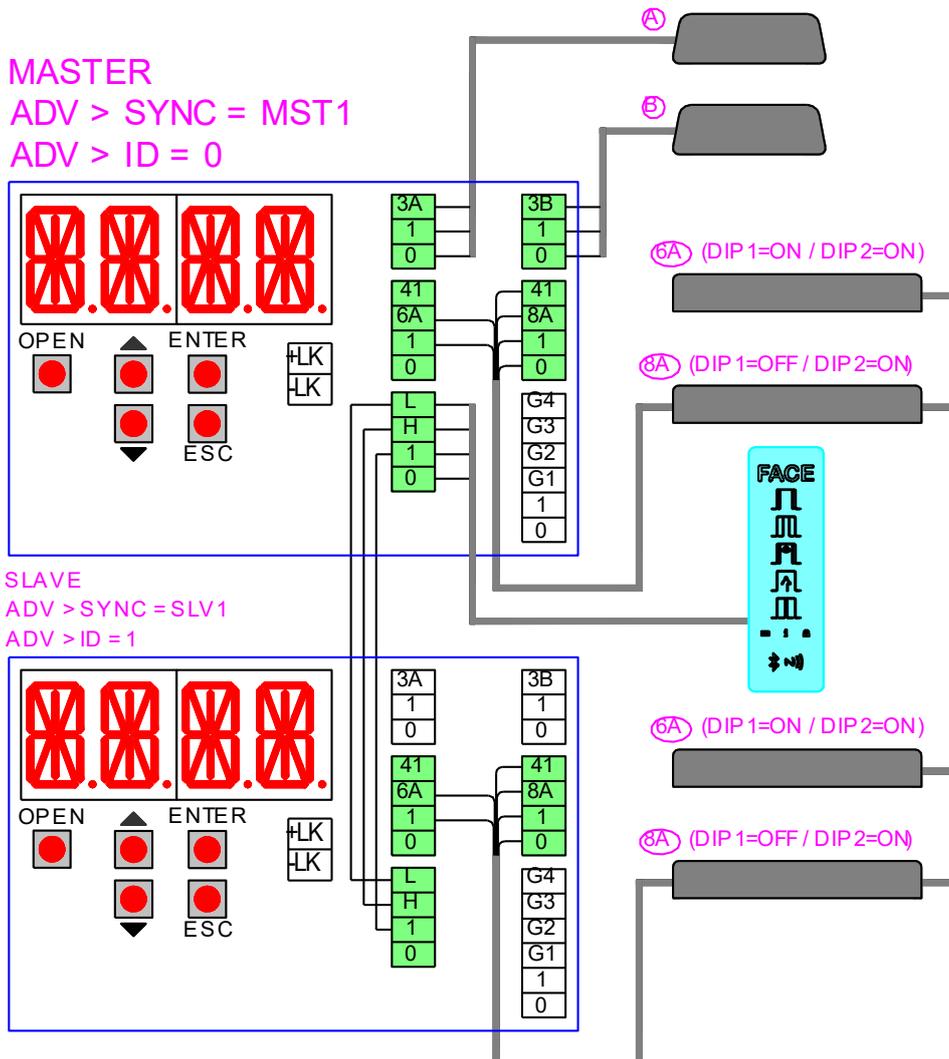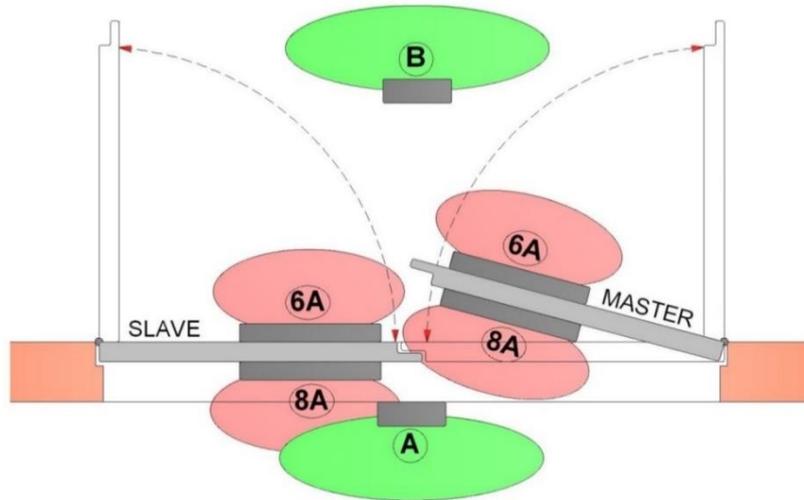

6. ELECTRONIC CONTROL ADJUSTEMENT

The electronic control has 4 buttons and 4 alphanumeric displays to set all the necessary adjustments.

After turning on the electronic control, the display shows the word "MENU". The operation of the four keys are indicated in the table.

Keys	Description	
ENTER	Select button, each time you press the button you enter on the selected parameter. Save button, pressing for 1 seconds you "SAVE" the selected value. MENU = Main parameters menu ADV = Advanced parameters menu SEL = Function selector menu MEM = Memory management menu INFO = Information and diagnostics menu	
ESC	Exit button, exit from all the parameter or exit from the menu.	
↑	Scroll button, each press selects a menu item or increases the value of the selected item.	
↓	Scroll button, each press selects a menu item or reduces the value of the selected item.	
↑ + ↓	To turn upside down the display, press the two scroll buttons simultaneously for 3 seconds.	

6.1 MENU (BASIC SETTINGS MENU)

Using the buttons ↑ and ↓ choose MENU, press ENTER to select and adjust the following parameters.

(*) Factory settings.

Display	Description
DOOR DOOR TYPE	Setting the automation type. Choose between the following values: SW2 (*) = SW2 automation SW5 = SW5 automation SW4 = SW4 automation (OLD VERSION)
OPEN OPENING DIRECTION	Setting the opening direction. Choose between the following values: ← (*) = door hinged on left → = door hinged on right
ARM ARM TYPE	Setting the type of arm. Choose between the following values: SA (*) = sliding arm to pull AA = articulated arm to push SA1 = sliding arm to push
VOP OPENING SPEED	Opening speed setting. Choose between the minimum and maximum: minimum value = 15 deg/s maximum value = 90 deg/s (* 50 deg/s)
VCL CLOSING SPEED	Closing speed setting. Choose between the minimum and maximum: minimum value = 15 deg/s maximum value = 50 deg/s (*)
TAC CLOSING TIME	Open door time setting. Choose between the minimum and maximum: NO = the door is always open minimum value = 1 s (*) maximum value = 30 s
PUSH MOTOR POWER	Force setting. Choose between the minimum and maximum: minimum value = 1 maximum value = 10 (*)
LEAF DOOR WEIGHT	Setting the weight of the door. Choose between the following values: NO = without door MIN = light door MED (*) = medium door MAX = heavy door
RAMP ACCELERATION	Set the door acceleration. Choose between the following values: SLOW = slow acceleration MED (*) = medium acceleration FAST = fast acceleration

Display	Description
BTMD BATTERY MODE	Setting operation of battery power device, in absence of electricity. Choose between the following values: NO (*) = battery not connected EMER = emergency open CONT = continuation of normal operation of the door, with last cycle of opening Note: the number of operations with battery, depends on the efficiency of the battery, the weight of the doors and the present friction. FIRE = priority closing of the door for fire alarm. Note: If the automatic door is turned off for long periods, disconnect the battery from the electronic board.

6.2 ADV (ADVANCED PARAMETERS MENU)

Using the buttons ↑ and ↓ select ADV, press ENTER to select and adjust the following parameters.

(*) Factory settings.

Display	Description
8AEX 8A-EXCLUSION	Exclusion of the operation of the sensor closing safety. Choose between the minimum and maximum values: minimum value = 0% (*) maximum value = 50%
6AEX 6A-EXCLUSION	Exclusion of the operation of the sensor opening safety. Choose between the minimum and maximum values: minimum value = 0% (*) maximum value = 50%
ST6A 6A-SETTING	Operation of 6A safety command, after the door stop. Choose between the following values: CLOS (*) = automatic closing of the door OPEN = continues the opening of the door
ELLK LOCK OPERATION TYPE	Selecting the electric lock. Choose between the following values: NO (*) = electric lock not connected LOCK = standard electric lock (security operation) SAFE = electromagnet (safety operation) AUTO = electromagnet (operation matched to the function selector) OPEN = electromagnet for open door
LKPW LOCK POWER SUPPLY	Power supply electric lock (-LK / +LK terminals). Choose between the following values: 12 (*) = 12V electric lock 24 = 24V electric lock 12PW = output 12 Vdc (1A max) for external powering accessories 24PW = output 24 Vdc (0,5A max) for external powering accessories
TALK LOCK ADVANCE TIME	Time advance operating electric lock. Choose between the minimum and maximum values: minimum value = 0 s (* 0.5 s) maximum value = 5 s
TRLK LOCK OPERATION TIME	Operating time of the electric lock. Choose between the minimum and maximum values: minimum value = 0.5 s (*) maximum value = 10 s CLOS = the electric lock works until the door is closed
LKSH LOCK SHOT	Setting of closing push for hooking the electric lock. Choose between the following values: NO (*) = no push MIN = light push MED = medium push MAX = heavy push
ULSH UNLOCK SHOT	Push setting to release the electric lock before opening the door. Choose between the following values: NO (*) = no push MIN = light push MED = medium push MAX = heavy push
PUCL PUSH DOOR CLOSED	Setting the push on the closed mechanical stop. Choose between the following values: NO (*) = no push MIN = light push MED = medium push MAX = heavy push XMAX = very heavy push
PIPP PUSH DOOR OPEN	Setting of the opening push. Choose between the following values: NO (*) = no push YES = push enabled (disabled with ANG)

Display	Description
HOLD HOLD DOOR OPEN	Setting the push of keeping the door open. Choose between the following values: NO = no push MIN = light push MED (*) = medium push MAX = heavy push XMAX = very heavy push
HAND MANUAL OPERATION	Manual operation of the door in power-assisted mode or with push opening. Choose between the following values: NO = manual operation power-assisted disabled PWAS (*) = manual operation power-assisted enabled. PUGO = manual operation power-assisted enabled and push opening enabled Note: the 6A safety device is disabled during manual opening.
SEX SAFETY EXCLUSION	Exclusion of the 8A safety sensor if the door is pushed manually (see power-assisted mode HAND=PWAS and HAND=PUGO). Choose from the following values: NO = 8A safety is working YES (*) = 8A safety is excluded
PAL POWER-ASSIST LEVEL	Selecting of the power-assist level. Choose between the following values: MIN = the motor assistance for manual operation is minimal MED (*) = the motor assistance for manual operation is medium MAX = the motor assistance for manual operation is maximum
ANGL OPENING ANGLE	Selecting of the door opening angle. Choose between the following values: NO (*) = the door opens up to the mechanical opening stop 1 ... 240 = the door opens up to the selected angle Note: the value indicated refers to the arm angle and not to the door angle
TAKO KO-CLOSING TIME	Open door time setting, after the 1-G1/G2/G3/G4 command (see menu settings: ADV > STG1/STG2/STG3/STG4 = KO/KO2). Choose between the minimum and maximum: NO (*) = see MENU > TAC minimum value = 1 s maximum value = 30 s
MOT MOTOR CIRCUIT	Setting the manual friction of the door, by means of the electrical connection of the motor windings. Choose between the following values: OC = manual door opening without friction (motor with open circuit windings) SC (*) = manual door opening with friction (motor with short-circuit windings)
T41 SAFETY TEST	Enable test for safety devices (in accordance with EN 16005). Choose between the following values: NO = test disabled YES (*) = test enable
SYNC DOOR SYNCHRO- NIZATION	Door with 2 leaves, setting of master-slave synchronization. Choose between the following values: NO (*) = no synchronization (door with 1 leaf) MST1 = automation MASTER which opens first SLV1 = automation SLAVE which closes first MST2 = external automation MASTER which opens first (see menu: ADV > INK > EXT) SLV2 = external automation SLAVE which closes first (see menu: ADV > INK > EXT)
SDLY DOOR DELAY	Door with 2 leaves, setting of delay of movement between Master-Slave. Choose between the following values: NO = leaves without overlap MIN = minimum delay MED (*) = medium delay MAX = maximum delay
INK INTER-LOCKED DOOR	Interlocked operation of two automatic doors, the opening of a door is permitted only when the other door is closed. Choose between the following values. NO (*) = no interlock INT = internal door EXT = external door
ID ID NUMBER	If several automations are connected to the network via the 1-H-L terminals, they must have different identification numbers. Choose between the following values: NO (*) = no network 0 / 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8 / 9 / 10 / 11 / 12 / 13 / 14 N.B. After changing the ID, turn the automation off and on again.

Display	Description
PC CLOSING PUSH	<p>Independent setting of the closing force. Choose between the following values:</p> <p>NO (*) = see MENU > PUSH (same force in opening and closing)</p> <p>minimum value = 1 maximum value = 10</p> <p>Note: if necessary, the closing force (PC) can be set differently from the opening force (PUSH).</p>
STG1 STG2 STG3 STG4 <i>Setting of G1, G2, G3, G4 input</i>	<p>INPUT COMMANDS BETWEEN 1-G1, 1-G2, 1-G3, 1-G4 TERMINALS</p> <p>Choose between the following values.</p> <p>NO (*) = no function</p> <p>KO = opening command</p> <p>KO2 = semi-priority opening command (not active with function selector in closed door)</p> <p>KC = closing command (N.O.)</p> <p>FIRE = Priority closing command (N.C.), for fire alarm</p> <p>VOPN = N.O. opening limit-switch</p> <p>STEP = Step-by-step contact N.O. The closing of the contact performs in sequence the opening (disabled automatic closure) and the closing of the door. Note: do not use the STEP command with synchronized doors (see ADV > SYNC menu).</p> <p>SAM = Automatic setting command of function selector. The closing of the contact changes the function selector mode (see menu: SEL > SAM1 and SEL > SAM2).</p> <p>EMER = Emergency opening contact N.C. The opening of the 1-G1 contact opens the door.</p> <p>RSET = reset command</p> <p>CAB = Step-by-step contact N.O. The closing of the contact performs in sequence the closing of the door (disabling 3A/3B terminals, enabling the signaling for occupied cabin) and the opening of the door (enabling 3A/3B terminals, disabling the signaling for occupied cabin).</p> <p>INKE = Interlocked operation exclusion command between two doors (see menu: ADV > INK).</p> <p>PART = Opening command for the MASTER door only (see menu: ADV > SYNC).</p> <p>SUL = Command to unlock the function selector for 10 seconds</p>
STG1 STG2 <i>Setting of G1, G2 output</i>	<p>OUTPUT SIGNALS BETWEEN 0-G1, 0-G2 TERMINALS (12Vdc 30mA)</p> <p>Choose between the following values.</p> <p>NO (*) = no function</p> <p>BELL = The output is activated for 3 seconds when people enter the store (through the sequential activation of the contacts: 1-3B and 1-3A).</p> <p>SERV = The output is activated when the door reaches the number of maintenance cycles, set using the menu: INFO > SERV.</p> <p>WARN = The output is activated when at least one warning remains active for 5 minutes. For remove the alarm signal make a reset or turn off the power supply.</p> <p>CLOS = The output is activated when the door is closed</p> <p>OPEN = The output is activated when the door is open</p> <p>AIR = The output is activated when the door is not closed</p> <p>LAMP = The output is activated when the door is moving</p> <p>CABS = Signaling of the occupied cabin (see menu: ADV > STG2 > CAB)</p> <p>INK = Red traffic light signaling for interlocked doors (see menu: ADV > INK)</p> <p>PWOF = The output is activated in the absence of power supply (W128)</p> <p>HAND = The output is activated when the door is opened by hand</p> <p>FS = The output is activated when the door is not closed, in the presence of a fire alarm.</p> <p>3AS = The output is activated when input 3A is not active</p> <p>3BS = The output is activated when input 3B is not active</p> <p>ELLK = The output is activated in relation to the functioning of the electric lock (see menu: ADV > ELLK).</p> <p>SRES = The output is activated when a reset is performed (W127)</p>

(*) Factory settings. ATTENTION: terminals G1, G2, G3, G4 cannot have the same settings.

6.3 SEL (FUNCTION SELECTOR MENU)

Using the buttons ↑ and ↓ select SEL, press ENTER to select and adjust the following parameters.

(*) Factory settings.

Display	Description
MODE SELECTOR MODE	<p>Displaying of operating mode of function selector device. Choose between the following values:</p> <p>NO (*) = no mode</p> <p>OPEN = open door</p> <p>AUTO = automatic bi-directional operation</p> <p>CLOS = closed door</p> <p>1D = automatic one-way operation</p> <p>PA = automatic partial operation</p> <p>1DPA = automatic one-way operation and partial</p> <p>OFF = manual operation (Note: the opening and safety sensors are disabled)</p>
SECL SELECTOR LOCK	<p>How to activate the function selector. Choose between the following values:</p> <p>NO (*) = function selector always accessible</p> <p>LOGO = function selector accessible by selecting the logo for 3 seconds</p> <p>TAG = function selector accessible with badge and numeric code</p>
DLAY DELAY CLOSED DOOR	<p>Setting delay time function closed door. Choose between the minimum and maximum values:</p> <p>minimum value = 1 s (*)</p> <p>maximum value = 5 min</p>
TMEM TAG MEMORISE	<p>Saving procedure of badge and numeric code for function selector. Choose between the following values.</p> <p>NO (*) = no saving</p> <p>SMOD = Saving badge and numeric code for activation of the function selector.</p> <p>OPEN = Saving badge and numeric code for activation of priority opening.</p> <ul style="list-style-type: none"> - press the ENTER button for 1 second, the display shows REDY, FSD5 - approach the badge to the function selector (in front of the NFC symbol), the display shows the badge code, FSD6 - press the logo, enter the code (from 1 to 5 numbers), press the logo for confirmation, the display shows the numeric code (Note: the numeric code can be stored only if SECL=TAG), - wait for 2 minutes or press the ESC button. <p>Note: if the badge and the numeric code is not recognized the display shows the message UNKN.</p> <p>You can store a total maximum of 40 badges and numeric codes.</p> <p>APP = Saving phone for activation of the FACE PRC and FACE URC App</p> <ul style="list-style-type: none"> - press the ENTER button for 1 second, the display shows REDY, FSD5 - stay with the phone near the function selector (in the Bluetooth range). - wait for 2 minutes or press the ESC button.
TMAS TAG MASTER	<p>It is possible to create master badge and master numeric code that allows the saving of the badges and the numeric codes, without the use of the menu. Choose from the following values.</p> <p>NO (*) = no saving</p> <p>MMOD = creation of the master badge and master numeric code to saving badges and numeric codes for function selector activation: proceed as SMOD.</p> <p>MOPE = creation of the master badge and master numeric code to saving the badges and numeric codes of opening priority: proceed as OPEN.</p> <p>Note: if the badge and the numeric code is not recognized the display shows the message UNKN.</p> <p>FSD5 - The use of the master badge is the following:</p> <ul style="list-style-type: none"> - approach the master badge to the function selector (in front of the NFC symbol), the buzzer emits 2 beeps at the beginning of the storage procedure, - approach the badges, that you want to store, one at a time, to the function selector (in front of the NFC symbol), the buzzer emits 1 beep of confirmation storage, - wait for 2 minutes, the buzzer emits 2 beeps at the end of the storage procedure. <p>FSD6 - The use of the master numeric code is the following:</p> <ul style="list-style-type: none"> - press the logo, enter the master numeric code, press the logo for confirmation, the buzzer emits 2 beeps at the beginning of the storage procedure, - press the logo, enter the new code (from 1 to 5 numbers), press the logo for confirmation,, the buzzer emits 1 beep of confirmation storage, - wait for 2 minutes, the buzzer emits 2 beeps at the end of the storage procedure. <p>Note: if the badge and the numeric code is not stored, the buzzer emits no beeps.</p>

Display	Description
TDEL TAG DELETE	<p>Cancellation procedure of badge and numeric code. Choose between the following values.</p> <p>NO (*) = no cancellation</p> <p>YES = badge and numeric code cancellation</p> <p>- press the ENTER button for 1 second, the display shows REDY,</p> <p>FSD5 - approach the badge to the function selector (in front of the NFC symbol), the display shows the badge code,</p> <p>FSD6 - press the logo, enter the code (from 1 to 5 numbers), press the logo for confirmation, the display shows the numeric code.</p> <p>- wait for 2 minutes or press the ESC button.</p> <p>Note: if the badge and the numeric code is not recognized the display shows the message UNKN.</p>
TERA TAG TOTAL ERASE	<p>How to erase all stored badges and numeric codes. Choose between the following values:</p> <p>NO (*) = no erase</p> <p>YES = cancellation of all badges and numeric codes</p>
SAM1 SELECTOR AUTOMATIC MODE	<p>First setting of function selector, when the 1-G1 (1-G2) contact becomes closed. Set the menu ADV > STG1 (STG2) > SAM.</p> <p>Connect the contact of a clock to 1-G1 (1-G2) terminals, and choose between the following values:</p> <p>OPEN = open door</p> <p>AUTO = automatic bi-directional operation</p> <p>CLOS (*) = closed door</p> <p>1D = automatic one-way operation</p> <p>PA = automatic partial operation</p> <p>1DPA = automatic one-way operation and partial</p> <p>OFF = manual operation (Note: the opening and safety sensors are disabled)</p>
SAM2 SELECTOR AUTOMATIC MODE	<p>Second setting of function selector, when the 1-G1 (1-G2) contact becomes open. Set the menu ADV > STG1 (STG2) > SAM.</p> <p>Connect the contact of a clock to 1-G1 (1-G2) terminals, and choose between the following values:</p> <p>OPEN = open door</p> <p>AUTO = automatic bi-directional operation</p> <p>CLOS (*) = closed door</p> <p>1D = automatic one-way operation</p> <p>PA = automatic partial operation</p> <p>1DPA = automatic one-way operation and partial</p> <p>OFF = manual operation (Note: the opening and safety sensors are disabled)</p>
FW FIRMWARE UPGRADE	<p>Programming procedure of function selector.</p> <p>Insert the USB/micro SD memory in the electronic control.</p> <p>From this menu, choose the firmware version you want.</p> <p>Press ENTER until it starts the programming procedure that lasts about 30 seconds (the display shows "WAIT • • •"), at the end the display shows "SAVE".</p> <p>After the procedure, remove the USB/micro SD memory from the electronic control and store it for future use.</p> <p>Note: in the case of programming error or missing firmware (W103), proceed as follows: disconnect the power supply, insert the USB/micro SD memory, give power supply, and repeat the programming procedure from this menu.</p>
VER VERSION	<p>Displaying the firmware version of function selector.</p>
TIN TAG INPUT	<p>You can upload the badges and numeric codes used in another automation, already stored in the USB/micro SD memory. Choose between the following values:</p> <p>NO (*) = no upload</p> <p>YES = upload the badges and numeric codes from the USB/micro SD memory</p>
TOUT TAG OUTPUT	<p>You can save the stored badges and numeric codes in the USB/micro SD memory. Choose between the following values:</p> <p>NO (*) = no save</p> <p>YES = save the stored badges and numeric codes in the USB/micro SD memory</p>

6.4 MEM (MEMORY MANAGEMENT MENU)

Using the buttons ↑ and ↓ select MEM, press ENTER to select and adjust the following parameters.

(*) Factory settings.

Display	Description
FSET FACTORY SETTINGS	Restore all settings to factory defaults. Choose between the following values: NO (*) = no restore. YES = restore to factory settings.
LSET LOW ENERGY SETTINGS	Setting values for low energy doors. Choose between the following values: NO (*) = no setting YES = Low energy settings: MENU > PUSH = 4 / MENU > VOP = 20 / MENU > VCL = 20.
FW FIRMWARE UPGRADE	Programming procedure of electronic control. Insert the USB/micro SD memory in the electronic control. From this menu, choose the firmware version you want. Press ENTER until it starts the programming procedure that lasts about 30 seconds (the display shows "WAIT • • •"), at the end the display shows "SAVE". After the procedure, remove the USB/micro SD memory from the electronic control and store it for future use. Note: in the case of programming error or missing firmware (W100), proceed as follows: disconnect the power supply, insert the USB/micro SD memory, give power supply, the programming procedure starts automatically.
SIN SETTING INPUT	You can upload the menu settings used in another automation, already stored in the USB/micro SD memory. Choose between the following values: NO (*) = no upload YES = upload the menu settings from the USB/micro SD memory
SOUT SETTING OUTPUT	You can save the menu settings of automation in use, in the USB/micro SD memory. Choose between the following values: NO (*) = no save YES = save the menu settings of automation in the USB/micro SD memory

6.5 INFO (INFORMATION AND DIAGNOSTICS MENU)

Using the buttons ↑ and ↓ select INFO, press ENTER to select and adjust the following parameters.

(*) Factory settings.

Display	Description
SHOW DISPLAY INFO	Displaying information of warning and faults. Choose between the following values: CONT (*) = the display shows the active contacts of the terminal blocks and the alarms. WARN = the display shows the alarms only.
VER VERSION	Displaying the firmware version of electronic control.
CYCL CYCLES	Shows the number of cycles of the door (1 = 1.000 cycles, 9000 = 9.000.000 cycles).
SERV SERVICE SIGNAL	Enabling the signaling of routine maintenance of the door. NO (*) = no signaling 1 = 1.000 cycles / 9000 = 9.000.000 cycles
LOG INFO FILE	You can save the following information in the USB/micro SD memory (swing_log.txt): the last 20 warnings, the menu settings, and the electronic devices connected to automation. Choose between the following values: NO (*) = no save YES = save the information in the USB/micro SD memory
WARN WARNING LIST	Displaying of the last 10 warnings (the warning number 0 is the last): 0.xxx / 1.xxx / 2.xxx / 3.xxx / 4.xxx / 5.xxx / 6.xxx / 7.xxx / 8.xxx / 9.xxx

DISPLAY	SEL	FLASH	WARNING	CHECK
W001		1	Encoder error	Check encoder connection
W002		1	Motor short circuit	Check the connection of the motor
W003		1	Motor control error	Electronic control failure
W010		2	Direction reversed	Check the presence of obstacles
W011		2	Running too long	Check the connection between the motor and leaf
W012		2	Running too short	Check the presence of obstacles
W013		2	Overrun	Check the mechanical stops
W100	-	-	Programming error	Repeat the programming procedure in MEM > FW menu
W103	-	-	Programming error Selector	Repeat the programming procedure in SEL > FW menu
W110		1	Internal memory error	Electronic control failure
W127	-	-	Automation reset	The automation performs a self-test
W128		on	No power supply	Check the power supply
W129		1	No battery	Check the battery connection
W130		1	Low Battery	Replace or recharge the battery
W140		3	6A safety test failure	Check the safety sensor connection
W142		3	8A safety test failure	Check the safety sensor connection
W145		4	Motor overtemperature (first step)	The door reduces the speed
W146		4	Motor overtemperature (second step)	The door stops
W150		2	Obstacle in opening	Check the presence of obstacles
W151		2	Obstacle in closing	Check the presence of obstacles
W152		2	Door locked open	Check the presence of locks
W153		2	Door locked closed	Check the presence of locks
W156		2	Door moved manually	Wait about 5 seconds
W160		1	Synchronization error	Check the ADV > SYNC and the ADV > INK menu
W256		-	Power on	-
W257		-	Firmware update	-
W320		on	Signaling of maintenance	Check the INFO > SERV menu
W330		1	Tuning between motor and electronics	Wait about 3-30 seconds

7. START-UP PROCEDURE OF THE AUTOMATIC SWING DOOR

7.1 Preliminary checks.

At the end of the installation, move the doors manually and make sure that operation is smooth and without friction. Check the solidity of the structure and the proper attachment of all the screws. Check the correctness of all electrical connections. Make sure you have installed the mechanical stop of the open door.

Before connecting any security devices, leave the jumper on terminals safety (41-6A, 41-8A).

7.2 Giving power supply and connect the battery, if present.

Note: every time you switch on the automation performs a self-test (from 3 to 30 seconds). The first opening and closing cycle is at low speed to allow the automatic learning.

To ensure that the electronic control has the factory settings, restore via the menu:

MEM> FSET> YES (confirm by pressing ENTER for 1 second).

Select the type of automation via the menu: MENU > DOOR = SW2 / SW5.

If the door is hinged on right, set as follow: MENU > OPEN = →

If the door is with articulated arm to push, set as follow: MENU > ARM = AA.

If the door is with sliding arm to push, set as follow: MENU > ARM = SA1.

Perform the menu settings as described in Chapter 6. Use OPEN button to perform the opening door, and verify the correct operation of the door.

Note: the automation automatically detects any obstacles during the closing movement (reversal movement) and opening (stopping movement).

If present, connect the electric lock of the door to the terminals (-LK \ +LK) of electronic control, and make the settings available in the ADV menu, as described in Chapter 5.11.

7.3 Connect one at a time, control and safety devices to protect the opening and closing cycle of the door, as described in Chapter 5.6, and verify proper operations.


Note: verify that the opening access is properly protected by safety sensors, in accordance with the requirements of the European standard EN16005 (annex C), or make speed adjustments in accordance with European standards EN16005 (Annex G), as shown in chapter 5.7.

7.4 If the risk assessment of the door allows protection through Low Energy, make the adjustments in accordance with the prescriptions of the European standard EN16005 (Annex F1), as indicated in chapter 5.8.

7.5 At the end of the automation starting, deliver to the owner the user instructions, including all warnings and information necessary to maintain the security and functionality of the automatic door.

Automations are feature of label containing the required information by European standards EN16005 and EN60335-2-103.

Note: the manufacturer of the automatic swing door has to add his own label identifying the installation.

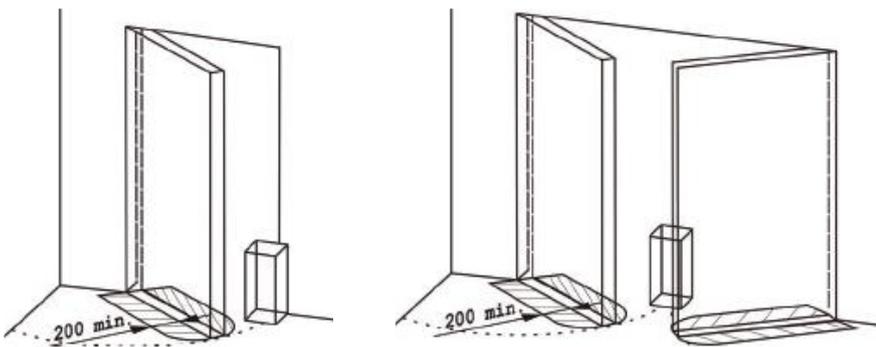

FACE S.r.l.	www.facespa.it
Viale delle Industrie,74 - 31030 Dosson di Casier (TV)	
Code: SW5	Standard: EN16005
DRIVE UNIT FOR SWING DOOR	
Input: 100-240V 50/60Hz Power: 70W	
Load: 40Nm	
Tmin: -15°C Tmax: +50°C IP20	
s/n: 1807 0011 Year: 2018	
CE	
0014918070011	

8. TROUBLESHOOTING

In addition to the following list of possible problems, there are warnings provided by the display, as described in chapter 6.5.

Problem	Possible causes	Remedy
The automation does not open or close.	No power supply (display off).	Check the power supply.
	Short circuited external accessories.	Disconnect all accessories from terminals 0-1 and reconnect them one at a time (check for voltage 12V).
	The door is locked by bolts and locks.	Check the freely move of the doors
The automation does not perform the functions set.	Function selector incorrectly set.	Check and correct the settings of the function selector.
	Control devices or safety always activated.	Disconnect devices from the terminal and verify the operation of the door.
The movement of the doors isn't linear, or reverse the movement for no reason.	The automation does not successfully perform the automatic learning.	Perform a reset or power off and power on the automation.
The automation opens but does not close	Anomalies during the safety devices test.	Jumper contacts one at a time 41 -6A , 41 - 8A.
	The opening devices are activated.	Verify that the opening sensors are not subject to vibration , do not perform false detections or the presence of moving objects in the field of action.
	The automatic closing doesn't work.	Check the settings of the function selector .
Safety devices not activating.	Incorrect connections between the safety devices and electronic control.	Check that the safety contacts of the devices are properly connected to the terminal blocks and the relative jumpers have been removed.
The automation opens by itself.	The opening and safety devices are unstable or detect moving bodies	Verify that the opening sensors are not subject to vibration , do not perform false detections or the presence of moving bodies in the field of action.

9. AUTOMATIC SWING DOOR ROUTINE MAINTENANCE PLAN

To ensure proper operation and safe use of the automatic swing door, as required by European standard EN16005, the owner has to perform routine maintenance by qualified personnel. Except for routine cleaning of the door, the responsibility of the owner, all maintenance and repair work must be carried out by qualified personnel. The following table lists tasks related to routine maintenance, and the frequency of intervention related to an automatic swing door operation with standard conditions. In the case of more severe operating conditions, or in the case of sporadic use of the automatic swing door, the frequency of maintenance can be consistently adequate.

Task	Frequency
Remove the power supply, open the automation and perform the following checks and adjustments. - Check all screws fastening of components within the automation. - Check the state of wear of the hinges (if necessary replace them). - Verify correct mounting of the arm on the door. - If present, verify proper engagement of the electric lock.	Every 6 months or every 200.000 cycles.
Connect the power supply and perform the following checks and adjustments. - Check the correct operation of the control devices and safety. - Check the detection area of the security sensors complies with the requirements of the European standard EN16005. - If present, verify the correct operation of the electric lock. - If present, verify the correct operation of the battery power device (if necessary replace the battery).	Every 6 months or every 200.000 cycles. Note: the verification of the automation security functions and safety devices must be made at least 1 time per year.

All maintenance, replacement, repair, update, etc.. must be written into the proof book, as required by European standard EN16005, and delivered to the owner of the automatic swing door. For repairs or replacements of products, original spare parts must be used.

9.1 DISPOSAL OF PRODUCTS



The packaging materials (cardboard, plastic, and so on) should be disposed of as solid household waste, and simply separated from other waste for recycling. Our products are made of various materials. Most of these (aluminum, plastic, iron, electrical cables) are classified as solid household waste. They can be recycled by separating them before dumping at authorized city plants. Whereas other components (control boards, batteries, and so on) may contain hazardous pollutants. These must therefore be disposed of by authorized, certified professional services. Before disposing, it is always advisable to check with the specific laws that apply in your area. DO NOT DISPOSE IN THE ENVIRONMENT.

DECLARATION OF INCORPORATION (FOR UK MARKET ONLY) The Supply of Machinery (Safety) Regulations 2008, Annex II-B



FACE S.r.l. - Viale delle Industrie, 74 - 31030 Dosson di Casier (TV) - ITALY

Declares that the Product automations for power operated swing door type: SW2, SW5.

Has been built for installation on pedestrian door and constitutes a machine in accordance with The Supply of Machinery (Safety) Regulations 2008. The manufacturer of the power operated pedestrian door must declare its conformity in accordance with The Supply of Machinery (Safety) Regulations 2008, prior to starting-up the machine.

It complies with the applicable essential safety requirements specified in The Supply of Machinery (Safety) Regulations 2008, Annex I: 1.1.2, 1.1.3, 1.2, 1.3.1, 1.3.2, 1.3.4, 1.3.7, 1.3.8, 1.4, 1.5.1, 1.5.2, 1.5.10, 1.5.11, 1.5.14, 1.6.1, 1.6.3, 1.7

It complies with the Electromagnetic Compatibility Regulations 2016.

It complies with following harmonized standards:

EN 16005 Power operated pedestrian doorsets - Safety in use - Requirements and test methods

EN 60335-2-103 Household and similar electrical appliances - Safety - Part 2: Particular requirements for drives for gates, doors and windows

The technical documentation complies with The Supply of Machinery (Safety) Regulations 2008, Annex VII-B.

The technical documentation is managed by: Ferdinando Menuzzo with registered offices in Viale delle Industrie, 74 - 31030 Dosson di Casier (TV) - ITALY

A copy of the technical documentation shall be supplied to the competent national authorities following duly motivated request.

Place and date:

Dosson di Casier, 2022-10-01


Paolo Bacchin
Managing Director